


Southport

Dining Table

style # FTS70837A

dpci # 009000845

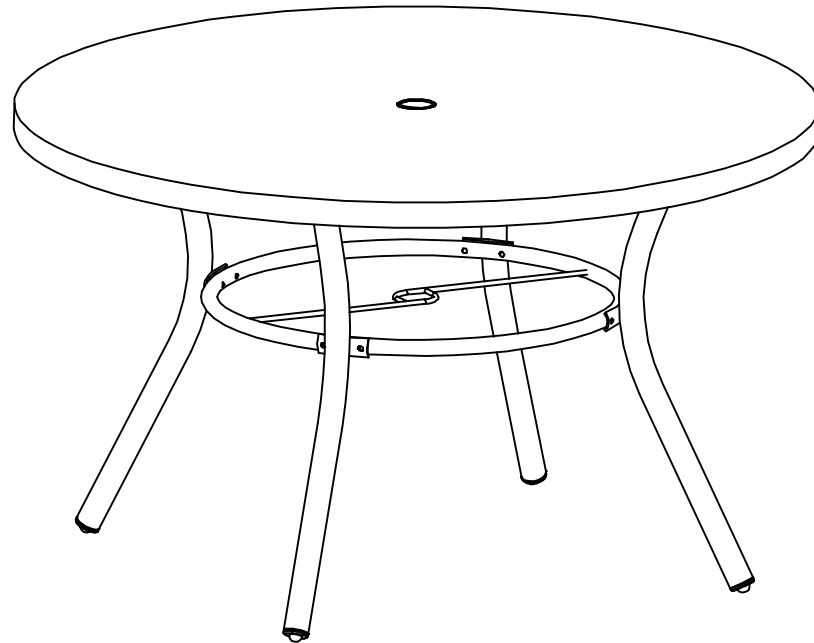

>>assembly instructions



Congratulations on your latest Target purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your patio in no time. Good luck – though we're confident you won't need it.

IMPORTANT WARNING:

Unpack the box on a clean, soft, level surface and make sure all parts have been included. To replace missing or damaged parts please call 855-MYTGTHOME (855-698-4846) during 7am - 7pm CST M-F, and 8am - 5pm CST Saturday.

ATTENTION:

This Table is not intended for use during any kind of inclement weather and the manufacturer is not, and can not be, held responsible for any damages caused as a result of such weather. Weather-related damage, or damage as a result of the Table not being stored properly when not in use, is not the responsibility of the manufacturer.

During extended periods of non-usage, off season, or in inclement weather (wind, rain, snow, hail, sleet), freezing conditions and extreme heat, the Table needs to be stored in a dry, sheltered place to prolong the life and to avoid damage to the Table.

WARRANTY:

This Table comes with a one year limited warranty against original manufacture defects. If you experience trouble with your new table, please call the customer service number below..

Target Corporation

Toll Free at: 855-MYTGTHOME (855-698-4846) during 7am - 7pm CST M-F, and 8am - 5pm CST Saturday.

Code: Yotrio 2019

before you begin

1. Check for damage or missing parts. Call 855-MYTGTHOME (855-698-4846) to order missing supplies.
2. Use the carton as a working surface to prevent product damage during assembly.
3. Gather all tools prior to assembly.

table of contents

introduction	2-3
hardware	5
parts list	6
assembly	7-10

hardware

 
(Part E)×8

M6*15mm screw with washer



(Part F)×8

M6*40mm screw with washer



(Part G)×8

washer



(Part H)×8

M6 nut



(Part I)×1

allen wrench




(Part J)×1

wrench





ITEM DESCRIPTION QUANTITY

A hole cover 1
B table top 1
C connected bracket 1
D table leg 4

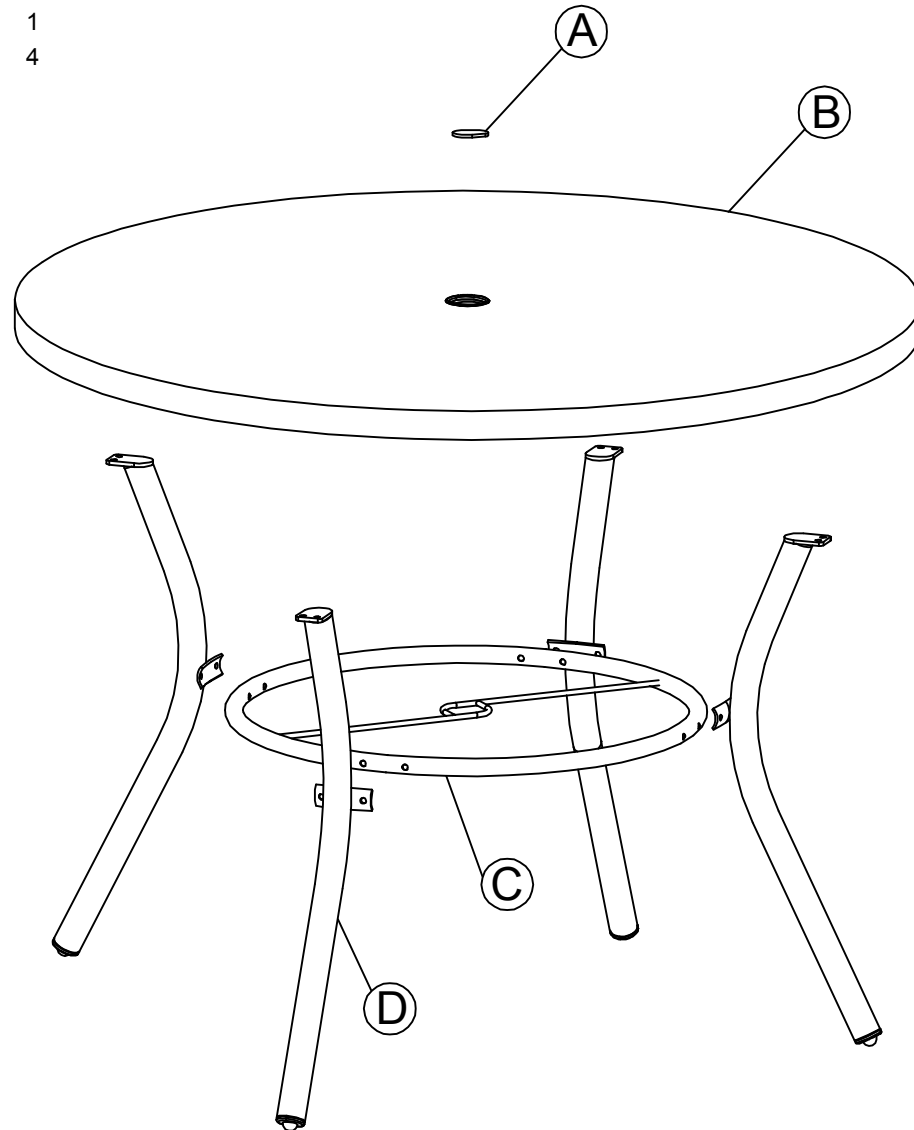

step 01:

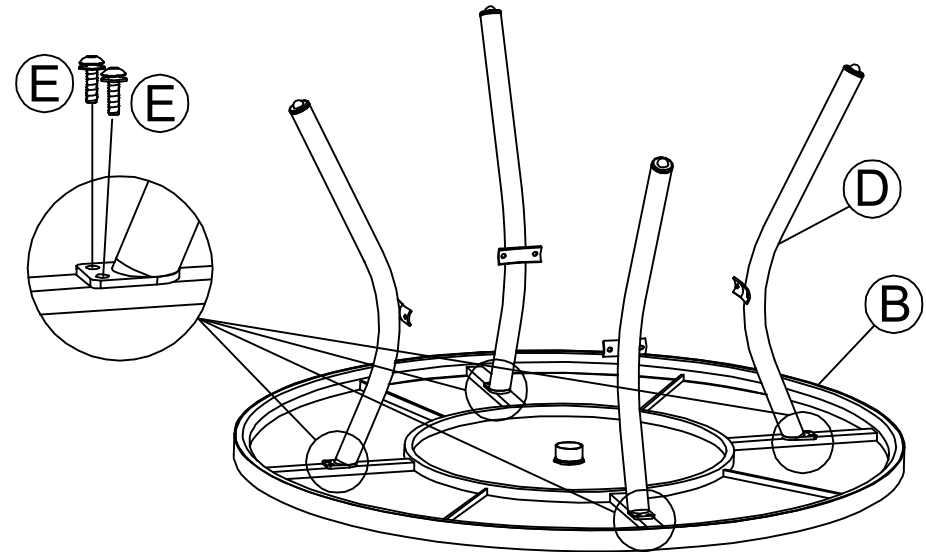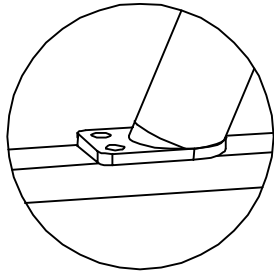

(Part E)×8
M6*15mm screw with washer



(Part F)×8
M6*40mm screw with washer



(Part G)×8
washer



(Part H)×8
M6 nut



(Part I)×1
allen wrench



(Part J)×1
wrench




ATTENTION: To avoid damage to your new patio furniture, please use either the carton or another soft surface such as carpet as a working surface to prevent product damage during assembly.

1. Attach the table leg (D) to the table top (B) by lining up the bolt holes on the end of the table leg (D) with the corresponding bolt holes on the back side of the table top (B).
2. Secure with M6*15mm screw with washer (E), tighten using allen wrench (I).
Repeat this step until all four table leg (D) are secured to the table top (B).

Do not completely tighten screws until all screws are started.


step 02:

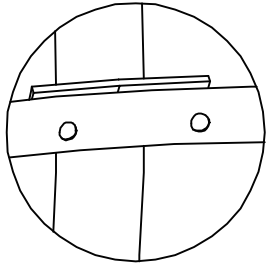

(Part E)×8
M6*15mm screw with washer



 (Part F)×8
M6*40mm screw with washer



(Part G)×8
washer




(Part H)×8
M6 nut



(Part I)×1
allen wrench




(Part J)×1
wrench

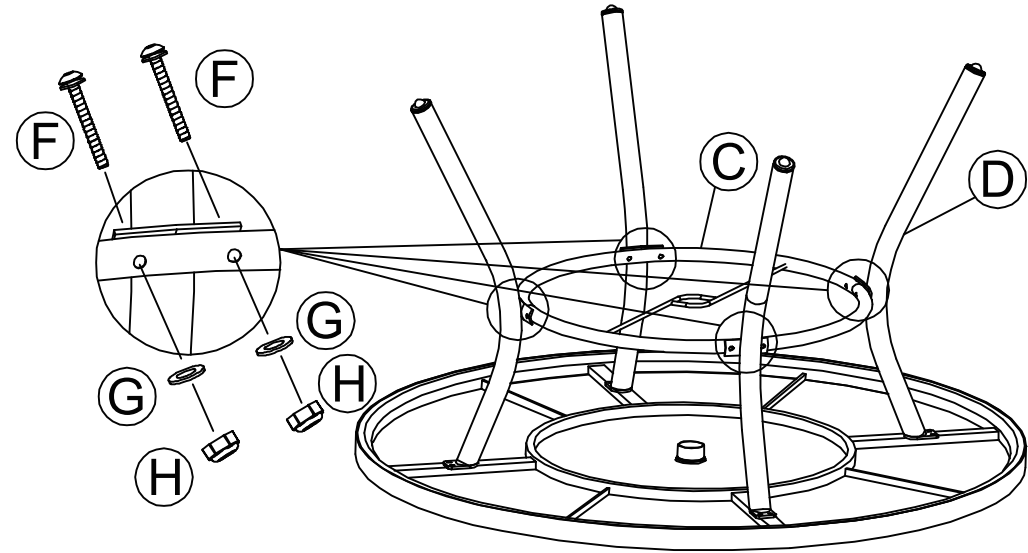

1. Attach the connected bracket (C) to the table leg (D) by lining up the bolt holes on the connected bracket (C) with the corresponding bolt holes on the middle of the leg (D).
2. Secure with M6*40mm screw with washer (F), washer (G) and M6 nut (H). Tighten using allen wrench (I) and wrench (J).
Repeat this step until all four table legs (D) are secured to the connected bracket (C).


Do not completely tighten screws until all screws are started.

step 03:

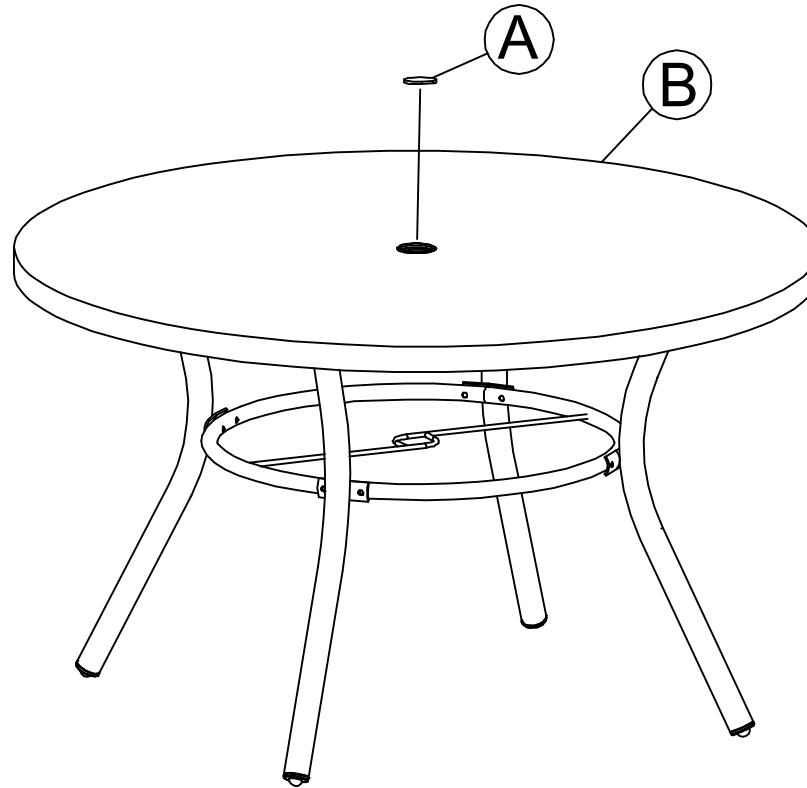

-
1. Tighten all the screws.
Return table to upright position onto a flat level surface.
put the hole cover(A) on the hole of the table top (B).

step 04:

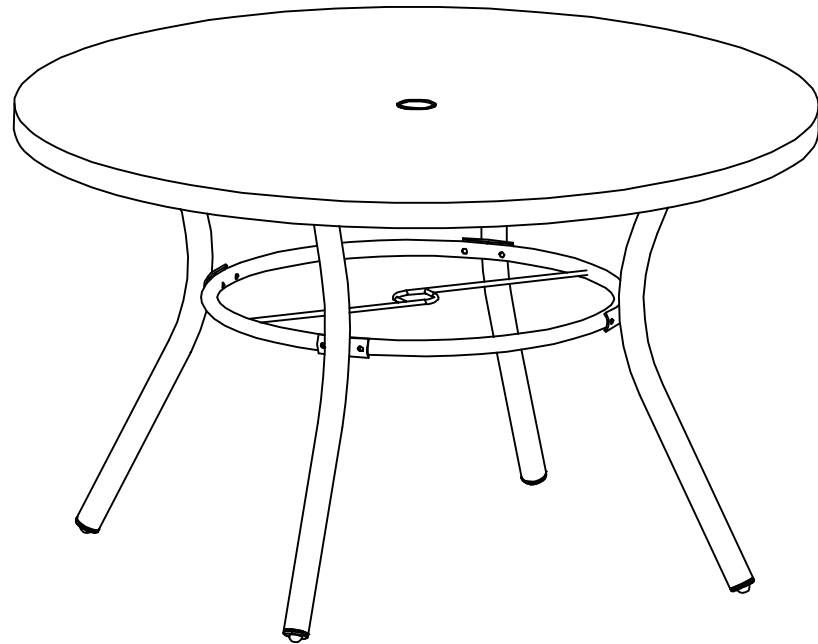

You are now ready to enjoy your new table

For longer life, cover and store when not in use.

Frame Care:

Wipe clean with damp cloth. Use only mild soap and detergents.

Thank you for making your Patio purchase at Target! Please review your purchase on Target.com.

QUESTIONS? Just call 855-MYTGTHOME (855-698-4846) for parts and service. For faster service, have the style number and DPCI number ready when when calling.

