

HAMPTON BAY®

ITEM #1001 025 583
MODEL #FDS50288C

Folding Sling Chair Use and Care Guide

Safety Information



WARNING: Never use this product as a support. Do not shake, lean, or climb on the product at any time.



WARNING: Weight limit for chairs is 225 lbs (102.05Kg) for each seat.

Warranty

1 YEAR FRAME AND FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frame and fabric to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center.

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing, and abusive use.

 
 
 
are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

For questions or concerns about this product contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.Homedepot.ca.

Operation




1 Opening the chair

- Slide the seat downward and the backrest backward until the legs fully extends outward.
- Turn the plastic buckle in a clockwise direction to fix the legs.

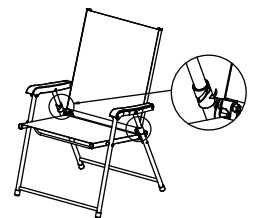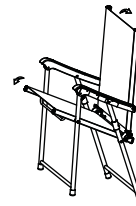

2 Folding the chair

   - Turn the plastic buckle in a counterclockwise direction to loosen the legs.
- Lift the seat upward and the backrest forward to fold the chair.

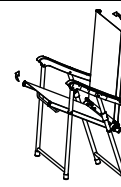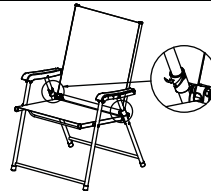

Care and Cleaning

- For best results, clean the frame and fabric with a damp cloth, and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- Do not clean with abrasive materials, bleach or solvents.
- Store in a dry, sheltered place when not in use.
- Keep away from fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.

HOMEDEPOT.CA

Please contact 1-855-HD-HAMPTON for further assistance.