
Item # 0000 000 000 Model # FRS50006I

HAMPTON BAY

USE AND CARE GUIDE

STEEL WICKER EGG CHAIR

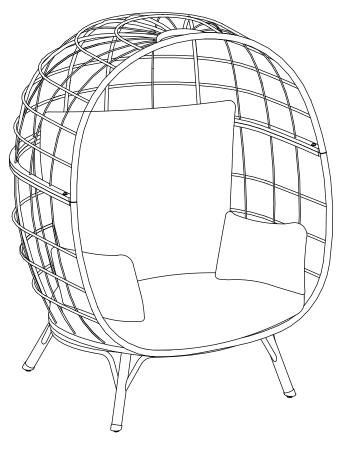

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HOMEDEPOT.CA

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this chair. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents
Important Safety Instructions
Save These Instructions2
Read All Instructions Before Use
Warranty
What is covered
What is not covered

Pre-Assembly
Planning Assembly 3
Hardware Included
Package Contents 4
Assembly 5
Care and Cleaning7

Important Safety Instructions

SAVE THESE INSTRUCTIONS

WARNING: THIS CHAIR IS MADE FOR THE EXPLICIT PURPOSE OF PROVIDING OUTDOOR FUNCTIONS AND IS NOT TO BE USED AS A TOY. THIS PRODUCT IS INTENDED FOR NORMAL OUTDOOR USE; HOWEVER, THE MANUFACTURER RECOMMENDS STORING AND/OR COVERING THIS PRODUCT WHEN ANY FORMIDABLE/SEVERE WEATHER IS APPROACHING.

WARNING: DO NOT LOCATE THIS PRODUCT NEAR OPEN FLAMES. DO NOT USE THIS PRODUCT AS A SUPPORT. DO NOT SHAKE, LEAN OR CLIMB ON THE PRODUCT. CHILDREN UNDER THE AGE OF 10, NEAR THE PRODUCT, SHOULD BE SUPERVISED BY A COMPETENT ADULT AT ALL TIMES. THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE AND WILL VOID THE WARRANTY.

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- 1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- 2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- 3. Do not move the chair while it is occupied. Failure to obey this caution could result in injury.

CAUTION: When not in use, secure the product in a cool and covered location.



CAUTION: Do not locate the product near any heat sources.



WARNING: Weight limit for the chair is 250lbs (113.39Kg) for each seat.



WARNING: Please keep children out of the assembly area before assembly.



WARNING: This chair unit is heavy, and may require two adults for safe assembly.



WARNING: Never use this product as a support. Do not shake, lean, or climb on the product at any time.



WARNING: Do not place heavy objects on the chair.

2 YEAR FRAME AND 2 YEAR FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frames to be free of manufacturing defects to the original purchaser for two years, and a two year limited warranty for the fabric.

WHAT IS NOT COVERED

Its remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.HOMEDEPOT.ca.

Pre-Assembly

PLANNING ASSEMBLY


Read all instructions before assembly.

To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.




NOTE: More than one person may be required to assemble this product.

HARDWARE INCLUDED

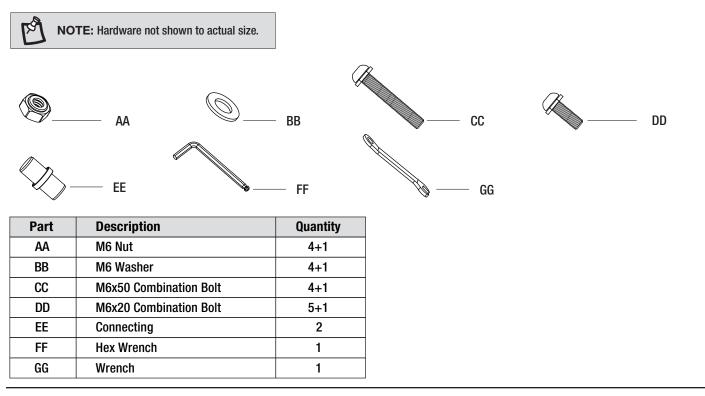

PACKAGE CONTENTS

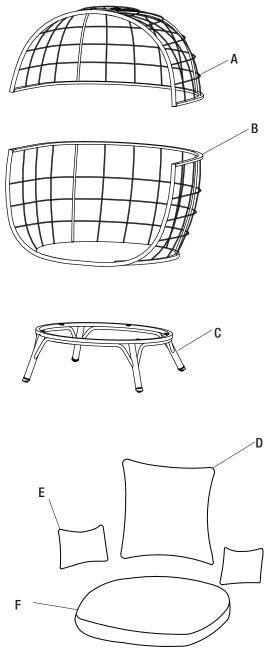


Part	Description	Quantity
Α	Тор	1
В	Seat	1
С	Base	1
D	Back Cushion	1
E	Pillow	2
F	Seat Cushion	1

Assembly


Attaching The Base To The Seat

- □ Place the seat (B) upside down on a soft surface.
- $\hfill\square$ Attach the base (C) to the seat (B) using the using M6x20 combination bolts (DD).
- □ Once all of the bolts are in place, fully tighten the bolts using the hex wrench (FF).

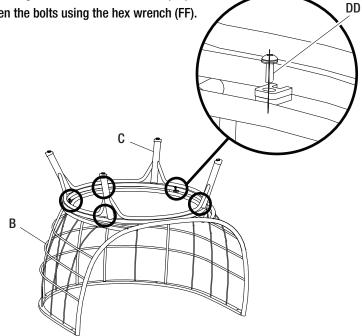

2 Attaching The Top To The Seat

- □ Turn the base (C) and seat (B) right side up.
- □ Attach the top (A) to the seat (B) using the connecting (EE) as shown below.

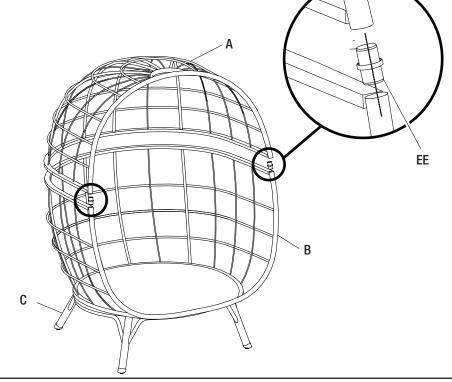


Assembly (continued)

3 Attaching The Top To The Seat


Attach the top (A) to the seat (B) using M6X50 combination bolts(CC), M6 washers (BB) and M6 nuts (AA).

• Once all of the bolts are in place, fully tighten the bolts using the hex wrench (FF).

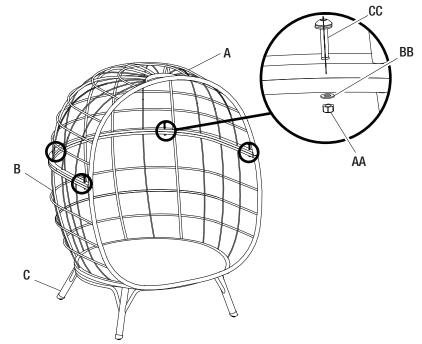

4 Placing The Cushions

- □ Put the seat cushion (F), back cushion (D) and pillow (E) on the chair.
- □ Ensure all connections are secure before use.

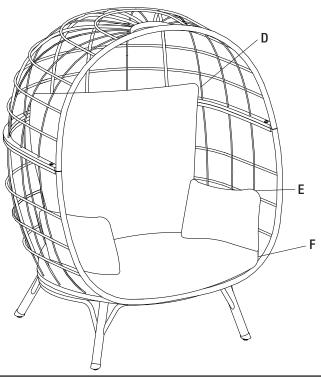

Care and Cleaning

- □ For best results, clean the frame and cushions with a damp cloth and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- $\hfill\square$ Do not clean with abrrasive materials, bleach or solvents.
- □ Store the chair in a dry sheltered place when not in use.
- □ Keep the chair out of fire, extreme heat, freezing conditions, and inclement weather as rain, hail, sleet, snow, or wind.

HAMPTON BAY

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HOMEDEPOT.CA

Retain this manual for future use.

For certification use only Factory ID# FRS50006I