
Model # FRS80937A-G FRS80937A

HAMPTON BAY

USE AND CARE GUIDE

Beacon Park - Captain Chair - 2 pack

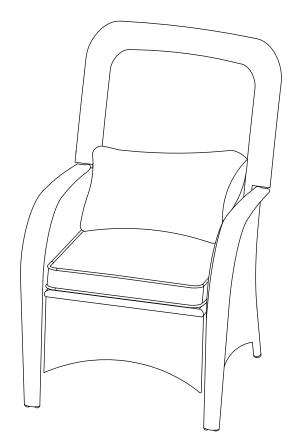

Questions, problems, missing parts? Before returning to the store call Hampton Bay Customer Service.

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HOMEDEPOT.CA

THANK YOU

Table of Contents

Table of Contents	
Important Safety Instructions	2
Save These Instructions	
Read All Instructions Before Use	
Warranty	
What is Covered	3
What is Not Covered	3

3
3
3
. 4
5
9

Important Safety Instructions

SAVE THESE INSTRUCTIONS



WARNING: This chair was made for the explicit purpose of providing outdoor functions and is not to be used as a toy.

This product is intended for normal outdoor use; however, the manufacturer recommends storing and / or covering this product when any formidable / severe weather is approaching.



WARNING: Do not locate this product near open flames. Do not use this product as a support. Do not shake, lean or climb on the product. Children under the age of 10, near the product, should be supervised by a competent adult at all times. This product is NOT intended for commercial use and will void the warranty.

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- Close supervision is necessary when this product is used by or near children, or disabled persons, if applicable.
- Use this product only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- 3. Do not move the chair while the chair is occupied. Failure to obey this caution could result in injury.
- 4. Do not rock in the chair as you may fall and cause serious injury.
- 5. Please keep children out of the assembly area before assembly.



WARNING: Do not place heavy objects on the chair.



WARNING: Weight limit is 300 lbs (136.07 Kg) for each chair.



WARNING: This chair unit is heavy, and may require two adults for safe assembly.



CAUTION: Do not locate the product near any heat source.

Warranty

2 YEAR FRAME AND 2 YEAR FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frames to be free of manufacturing defects to the original purchaser for two years, and a two year limited warranty for the fabric.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.homedepot.ca.

Pre-Assembly

PLANNING ASSEMBLY

Read all instructions before assembly.

To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.




NOTE: More than one person may be required to assemble this product.

HARDWARE INCLUDED





NOTE: Hardware not shown to actual size.

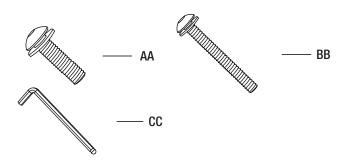

Part	Description	Quantity
AA	M6x20 combination bolt	12+1
BB	M6x50 combination bolt	8+1
CC	Hex wrench	1

PACKAGE CONTENTS

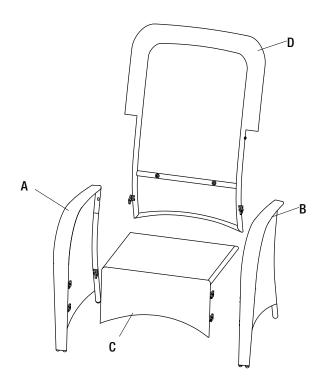

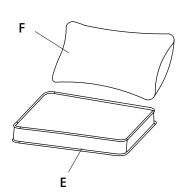

Part	Description	Quantity
Α	Right arm	2
В	Left arm	2
С	Seat	2
D	Back	2
E	Seat cushion	2
F	Accent pillow	2


Assembly

1 CONNECTING THE SEAT TO THE LEFT ARM

- Attach the seat (C) to the left arm (B) using M6x20 combination bolts (AA).
- $\hfill\Box$ Do not fully tighten all the bolts at this step.



NOTE: Loosely tighten all bolts using the hex wrench (CC).

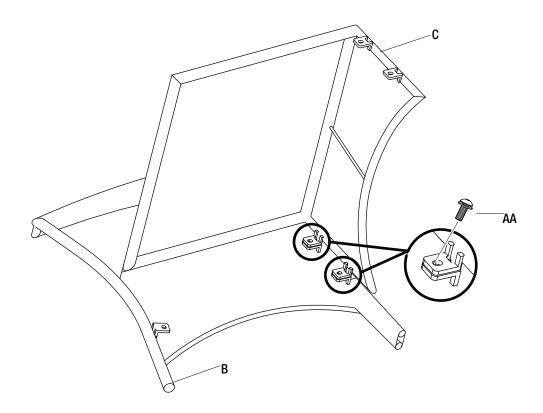


2 CONNECTING THE SEAT AND THE LEFT ARM TO THE BACK

- □ Attach the seat (C) to the back (D) using M6x50 combination bolts (BB).
- □ Attach the left arm (B) to the back (D) using an M6x20 combination bolt (AA).
- □ Do not fully tighten all the bolts at this step.



NOTE: Loosely tighten all bolts using the hex wrench (CC).

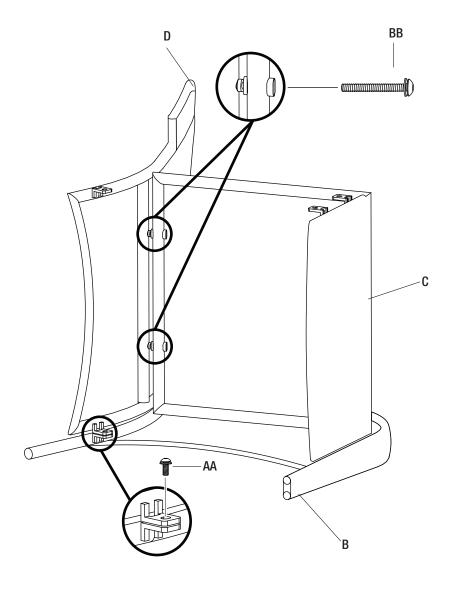


3 CONNECTING THE SEAT AND THE BACK TO THE RIGHT ARM

- □ Attach the seat (C) to the right arm (A) using M6x20 combination bolts (AA).
- □ Attach the back (D) to the right arm (A) using an M6x20 combination bolt (AA).
- Do not fully tighten all the bolts at this step.




NOTE: Loosely tighten all bolts using the hex wrench (CC).

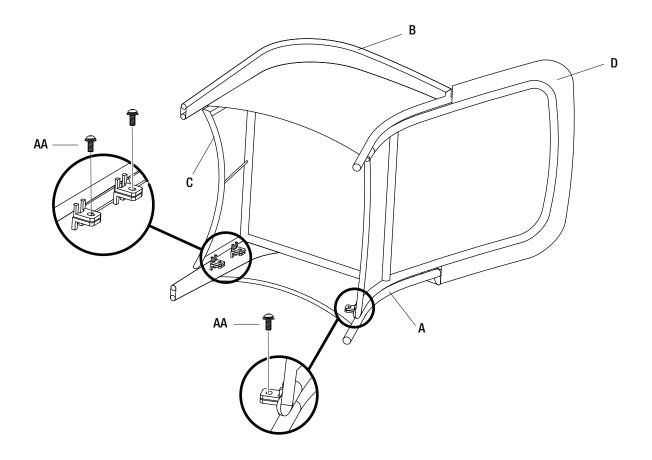


4 CONNECTING THE ARMS TO THE BACK

- □ Connect the arms (A & B) to the back (D) using M6x50 combination bolts (BB).
- Do not fully tighten the bolts at this step.

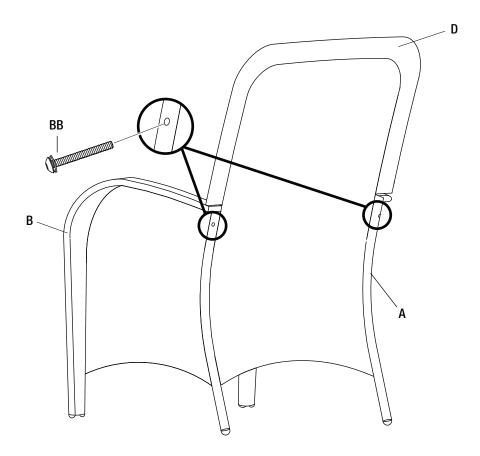

5 TIGHTENING THE BOLTS

- Once all of the bolts are in place, fully tighten the bolts using the hex wrench (CC).
- □ Place the seat cushion (E) and the accent pillow (F) to finish the assembly of the chair.
- Ensure all connections are secure before use.

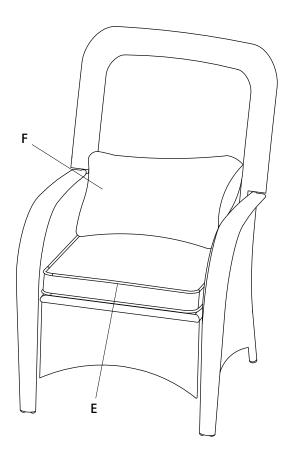

Care and Cleaning

- □ For best results, clean the chair with a damp cloth and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- $\hfill\Box$
- □ Store the chair in a dry, sheltered place when not in use.
- Keep the chair away from fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.

HAMPTON BAY

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service.

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HOMEDEPOT.CA

Retain this manual for future use.

For certification use only

Factory chair ID # FRS80937A