

HAMPTON BAY[®]

ITEM# 1004 632 747
MODEL # FRS50042A

Wicker Folding Chair

Use and Care Guide

Safety Information



WARNING: Never use this product as a support. Do not shake, lean, or climb on the product at any time.



WARNING: Weight limit for chairs is 225 lbs (102.05 kg) for each seat.

Warranty

2 YEAR FRAME WARRANTY

WHAT IS COVERED

We warrant the frames to be free of manufacturing defects to the original purchaser for two years.

WHAT IS NOT COVERED


It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit HAMPTONBAY.COM.

Operation


1 Opening the Chair

- Slide the seat downward and the backrest backward until the legs fully extend outward.

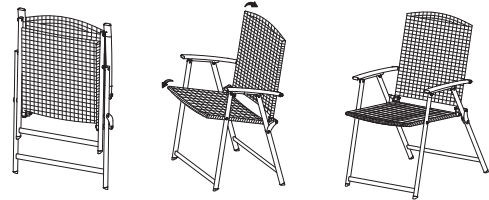

2 Folding the Chair

- Lift the seat upward and the backrest forward to fold the chair.

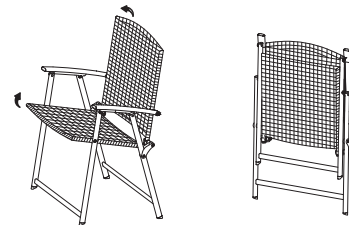

Care and Cleaning

- For best results, clean the frame with a damp cloth and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- Do not clean with abrasive materials, bleach or solvents.
- Store the chair in a dry sheltered place when not in use.
- Keep the chair away from fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.