

DO NOT RETURN TO RETAILER

IF YOU HAVE ANY QUESTIONS OR CONCERNS
PLEASE VISIT OUR WEBSITE AT:

www.yotrioint.com

OR TOLL FREE AT:

1-866-905-4107

MONDAY-FRIDAY 8:30 AM TO 5:00 PM PACIFIC STANDARD TIME / 11:30
AM TO 8:00PM EASTERN STANDARD TIME

YOTRIO CUSTOMER CARE

Warranty Coverage Requirements:

1. Copy of your Original Store Receipt.
2. Pictures of the damaged parts.
3. You must know the name of your product and any corresponding item numbers as well as the name of the store where you purchased the item.
4. Please gather all of this information BEFORE you call customer service.

CARE AND MAINTENANCE

- ❖ Before using, wipe the product completely with a soft, dry cloth.
- ❖ Spot-clean Cushions and slings using a sponge, mild soap and water. Rinse thoroughly with clean water. To prevent mildew, allow to air dry completely before using or storing.
- ❖ Never machine wash or tumble dry cushions, slings or umbrella covers as this will result in shrinkage or damage.
- ❖ Rinse wicker patio furniture with a hose or pressure washer. If the wicker is really dirty, you can use mild soap with water. Allow to dry completely before using or storing.
- ❖ To clean your patio umbrella, use a soft brush and mild soap and water. Allow to dry completely before storing.
- ❖ Avoid placing hot objects directly onto table top surface without a heat protector.
- ❖ Always store and/or cover your patio furniture in a cool dry place when not in used and away from direct sunlight.
- ❖ When storing, never wrap cushions in plastic. Plastic doesn't allow the cushion to breathe and can cause it to mildew if there's any moisture present.
- ❖ Always place your patio furniture away from fire, extreme heat, freezing conditions and inclement weather such as rain, hail, sleet, snow or wind.
- ❖ Never use bleach or strong solvents to clean as this will cause damage to both fabric and metal finishes.
- ❖ Do not allow water to build up in frames as this will cause corrosion and damage.

ONE-YEAR FRAME AND ONE-YEAR FABRIC/WICKER/FINISH ETC. LIMITED WARRANTY

You must retain the original receipt to obtain warranty service.





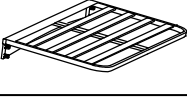
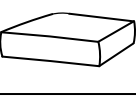




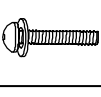



- ❖ Frames are warranted against defects in materials and workmanship for a period of one year from the date of original purchase.
This warranty does not cover damage to frames or welds due to commercial use, improper assembly, acts of nature, fire, freezing and abusive use.
- ❖ Rust, corrosion, and/ or rust stains are not covered by warranty.
- ❖ Purchased parts are not covered under this warranty.
- ❖ Fabric on cushions, slings and umbrella is warranted one year against separation at the seams.
Fading, mildew, and color discoloration due to exposure to the elements, chemicals and spills are not covered.
- ❖ The Powder coat and/ or paint are warranted one year against blistering, peeling, or crackling.
Fading due to exposure to elements, chemicals and spills is not covered. Scratches and chips due to normal wear and use are not covered.
- ❖ Wicker Weave are warranted one year against breakage, separation, or tearing.
Fading or discoloration due to exposure from chemicals, spills and/ or the elements is not covered.
- ❖ Warranty covers free replacement of item within one year of purchase. After the one year it remains the customer's responsibility for freight and packaging charges to and from our service center.
- ❖ We do not compensate the individual or any outside party for assembling or disassembling the product.
- ❖ Any replacement of warranted items will be in the original style and color, or similar style and color if the original is un-available or has been discontinued.
Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905-4107, 8:30 a.m. – 5:00 p.m. PST /11:30 a.m.- 8:00 p.m., EST, Monday- Friday.

Walmart Assembly Instruction


Providence Glider, Green/Red

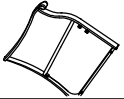Stock# BH15-092-099-18 / BH15-092-099-19

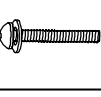NOTE: Do not completely tighten bolts until all steps are completed.

PART NO.	PART LIST	DESCRIPTION	QTY
A		Right arm	1
B		Back	1
C		Left arm	1
D		Base	1
E		Seat	1
F		Seat cushion	2
G		Back cushion	2
H		Pillow	2
AA		M6x55 Bolt with Washer	2
BB		M6x25 Bolt with Washer	7
CC		M6x35 Bolt with Washer	4
DD	 Thickness 4mm	Plastic washer-1	4
EE	 Thickness 2mm	Plastic washer-2	4
FF		Allen wrench	1


Step 1

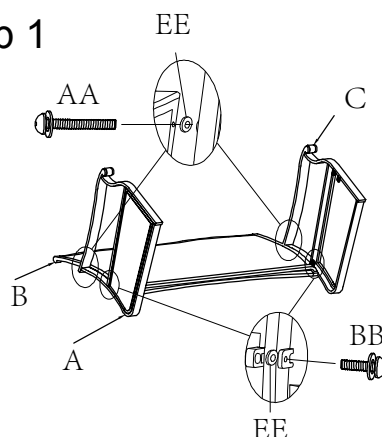

Step 1

Step 1: Place the back (B) on a soft surface. Attach the left arm (C) to the back (B) by lining up bolt holes on left arm (C) with the corresponding bolt holes on the back (B). Insert M6x55 bolts with washer (AA) with plastic washers-2 (EE) as well as M6x23 bolts with washer (BB). Loosely tighten the bolts with allen wrench (FF). Repeat this step to the right arm (A) and back (B).

Step 2

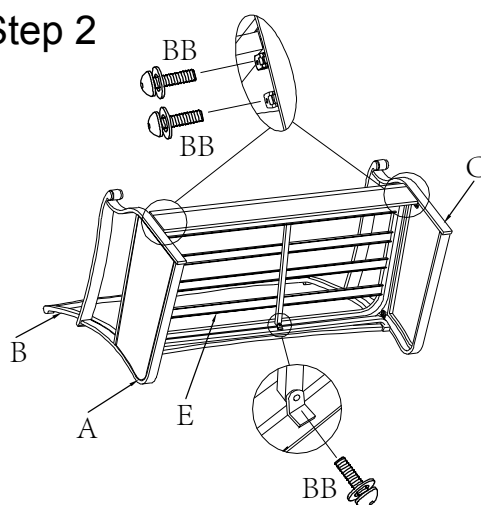

Step 2

Step 2: Attach the seat (E) to the arms (A&C) and the back (B) by lining up bolt holes on the back (B) with the corresponding bolt holes on the arms (A&C). Insert M6x25 bolts with washer (BB). Loosely tighten the bolts with the allen wrench (FF). Do not completely tighten.

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905-4107, 8:30 a.m. – 5:00 p.m. PST /11:30 a.m.- 8:00 p.m., EST, Monday- Friday.


Walmart Assembly Instruction

Providence Glider Green/Red

Stock# BH15-092-099-18 / BH15-092-099-19


NOTE: Do not completely tighten bolts until all steps are completed.

Step 3

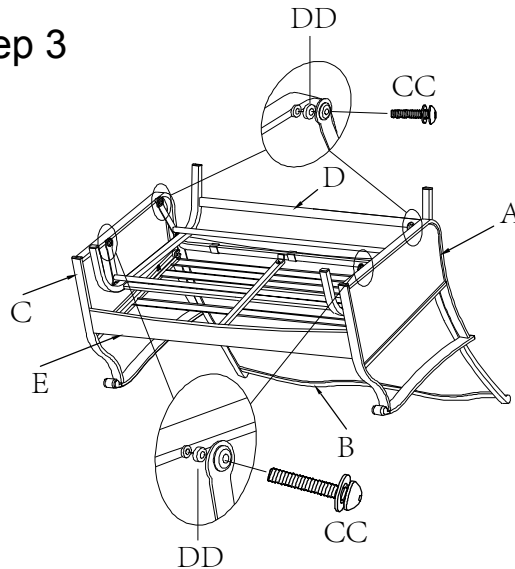

Step 3

Step 3: Turn the assembled parts upside down on a soft surface. Attach the base (D) to the left arm (C) and right arm (A) by lining up the bolt holes on the base (D) with the corresponding bolt holes on arms (A&C). Insert M6x35 bolts with washer (CC) and plastic washer-1 (DD). Loosely tighten the bolts with allen wrench (FF).

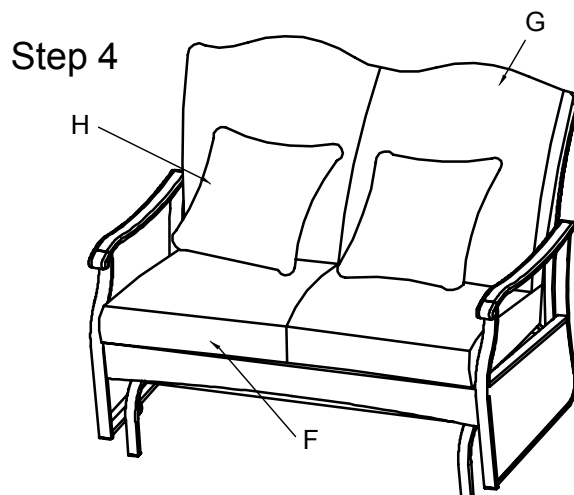

Step 4

Step 4

Step 4: Once all bolts in place, fully tighten all bolts. Turn the glider right side up on a flat level surface. Ensure all connections are secure before use. Place the seat cushions (F), the back cushions (G) and the pillows (H) on the glider.