

DO NOT RETURN TO RETAILER

IF YOU HAVE ANY QUESTIONS OR CONCERNS
PLEASE VISIT OUR WEBSITE AT:

www.yotrioint.com

OR TOLL FREE AT:

1-866-905-4107

MONDAY-FRIDAY 8:30 AM TO 5:00 PM PACIFIC STANDARD TIME / 11:30
AM TO 8:00PM EASTERN STANDARD TIME

YOTRIO CUSTOMER CARE

Warranty Coverage Requirements:

1. Copy of your Original Store Receipt.
2. Pictures of the damaged parts.
3. You must know the name of your product and any corresponding item numbers as well as the name of the store where you purchased the item.
4. Please gather all of this information BEFORE you call customer service.

CARE AND MAINTENANCE

- ❖ Before using, wipe the product completely with a soft, dry cloth.
- ❖ Spot-clean Cushions and slings using a sponge, mild soap and water. Rinse thoroughly with clean water. To prevent mildew, allow to air dry completely before using or storing.
- ❖ Never machine wash or tumble dry cushions, slings or umbrella covers as this will result in shrinkage or damage.
- ❖ Rinse wicker patio furniture with a hose or pressure washer. If the wicker is really dirty, you can use mild soap with water. Allow to dry completely before using or storing.
- ❖ To clean your patio umbrella, use a soft brush and mild soap and water. Allow to dry completely before storing.
- ❖ Avoid placing hot objects directly onto table top surface without a heat protector.
- ❖ Always store and/or cover your patio furniture in a cool dry place when not in used and away from direct sunlight.
- ❖ When storing, never wrap cushions in plastic. Plastic doesn't allow the cushion to breathe and can cause it to mildew if there's any moisture present.
- ❖ Always place your patio furniture away from fire, extreme heat, freezing conditions and inclement weather such as rain, hail, sleet, snow or wind.
- ❖ Never use bleach or strong solvents to clean as this will cause damage to both fabric and metal finishes.
- ❖ Do not allow water to build up in frames as this will cause corrosion and damage.

ONE-YEAR FRAME AND ONE-YEAR FABRIC/WICKER/FINISH ETC. LIMITED WARRANTY

You must retain the original receipt to obtain warranty service.










 










- ❖ Frames are warranted against defects in materials and workmanship for a period of one year from the date of original purchase.
This warranty does not cover damage to frames or welds due to commercial use, improper assembly, acts of nature, fire, freezing and abusive use.
- ❖ Rust, corrosion, and/ or rust stains are not covered by warranty.
- ❖ Purchased parts are not covered under this warranty.
- ❖ Fabric on cushions, slings and umbrella is warranted one year against separation at the seams.
Fading, mildew, and color discoloration due to exposure to the elements, chemicals and spills are not covered.
- ❖ The Powder coat and/ or paint are warranted one year against blistering, peeling, or crackling.
Fading due to exposure to elements, chemicals and spills is not covered. Scratches and chips due to normal wear and use are not covered.
- ❖ Wicker Weave are warranted one year against breakage, separation, or tearing.
Fading or discoloration due to exposure from chemicals, spills and/ or the elements is not covered.
- ❖ Warranty covers free replacement of item within one year of purchase. After the one year it remains the customer's responsibility for freight and packaging charges to and from our service center.
- ❖ We do not compensate the individual or any outside party for assembling or disassembling the product.
- ❖ Any replacement of warranted items will be in the original style and color, or similar style and color if the original is un-available or has been discontinued.
Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905-4107, 8:30 a.m. – 5:00 p.m. PST /11:30 a.m.- 8:00 p.m., EST, Monday- Friday.

Wal-mart.Com Assembly Instruction

Providence 4-Piece Conversation Set - Swivel Chair, Green/Red

Stock# BH15-092-199-14 / BH15-092-199-15(FRS62227S)

NOTE: Do not completely tighten bolts until all steps are completed.

	PART LIST	DESCRIPTION	QTY		PART LIST	DESCRIPTION	QTY
A		Left arm	1x2	EE		M8x27 Hex bolt	2x2
B		Right arm	1x2	FF		M8x32 Hex bolt	2x2
C		Back	1x2	GG		M8 Spring washer	4x2
D		Seat	1x2	HH		M8 Washer	4x2
E		Base	1x2	II		Spring metal	2x2
F		Seat cushion	1x2	JJ		M8 Nut	4x2
G		Back cushion	1x2	KK		Plastic washer	10x2
AA		M6x20 Bolt	6x2	LL		Allen wrench	1x2
BB		M6x45 Bolt	2x2	MM		Wrench	2
CC		M6x32 Bolt	2x2				
DD		M6 Washer	6x2				

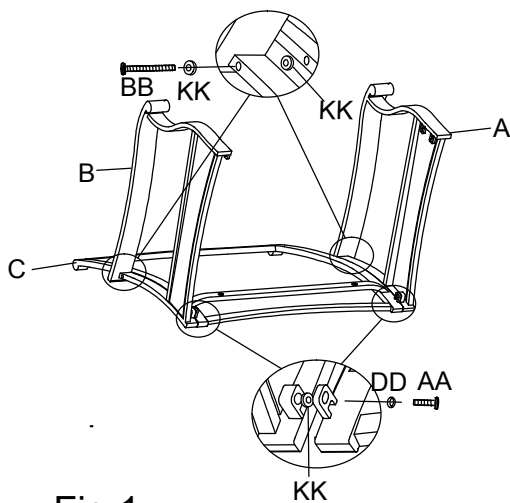


Fig.1

Step 1: Place the back (C) on a soft surface. Attach the right arm (B) to the back(C) by lining up bolt holes on the right arm (B) with the corresponding bolt holes on the back (C). Insert M6x45 bolts (BB) with plastic washers (KK) as well as M6x20 bolts (AA) and washers (DD&KK). Loosely tighten the bolts with allen wrench (LL). Repeat this step to the left arm (A) and back (C). Please see Fig.1.

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905-4107, 8:30 a.m. – 5:00 p.m. PST /11:30 a.m.- 8:00 p.m., EST, Monday- Friday.

Wal-mart.Com Assembly Instruction

Providence 4-Piece Conversation Set - Swivel Chair, Green/Red

Stock# BH15-092-199-14 / BH15-092-199-15(FRS62227S)

NOTE: Do not completely tighten bolts until all steps are completed.

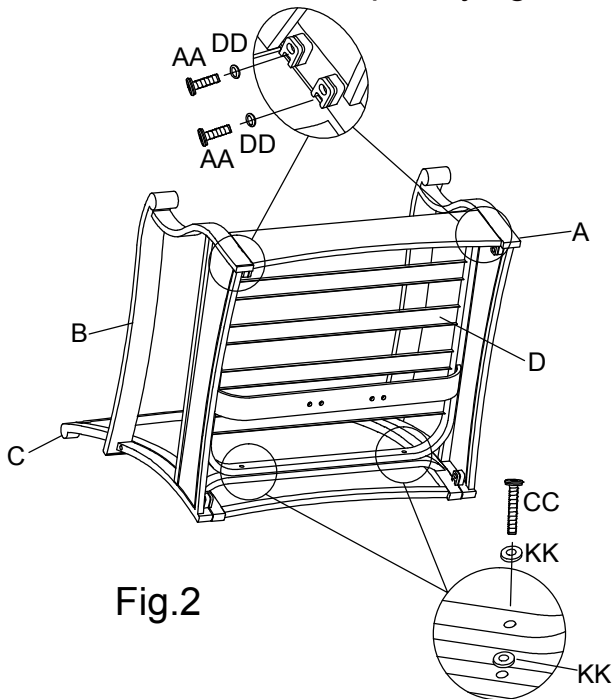


Fig.2

Step 2: Attach the seat (D) to the left arms (A) and the back (C). Line up the bolt holes on the seat (D) with the corresponding bolt holes on the left arm (A). Insert M6x32 bolts (CC) with plastic washers (KK) as well as M6x20 bolts (AA) and M6 washers (DD). Loosely tighten the bolts with allen wrench (LL). Repeat this step to the right arm (B) and the seat (D). Please see Fig.2.

Step 3: Fully tighten the bolts on the assembled part completely. Place the base (E) on the chair seat (D) and place the spring metal (II) on the other side of chair seat (D). Line up the bolt holes and insert M8x27 hex bolts (EE), M8x32 hex bolts (FF), M8 washers (HH) and M8 spring washers (GG). Fasten the M8 nuts (JJ) with the wrench (MM). Please see Fig. 3.

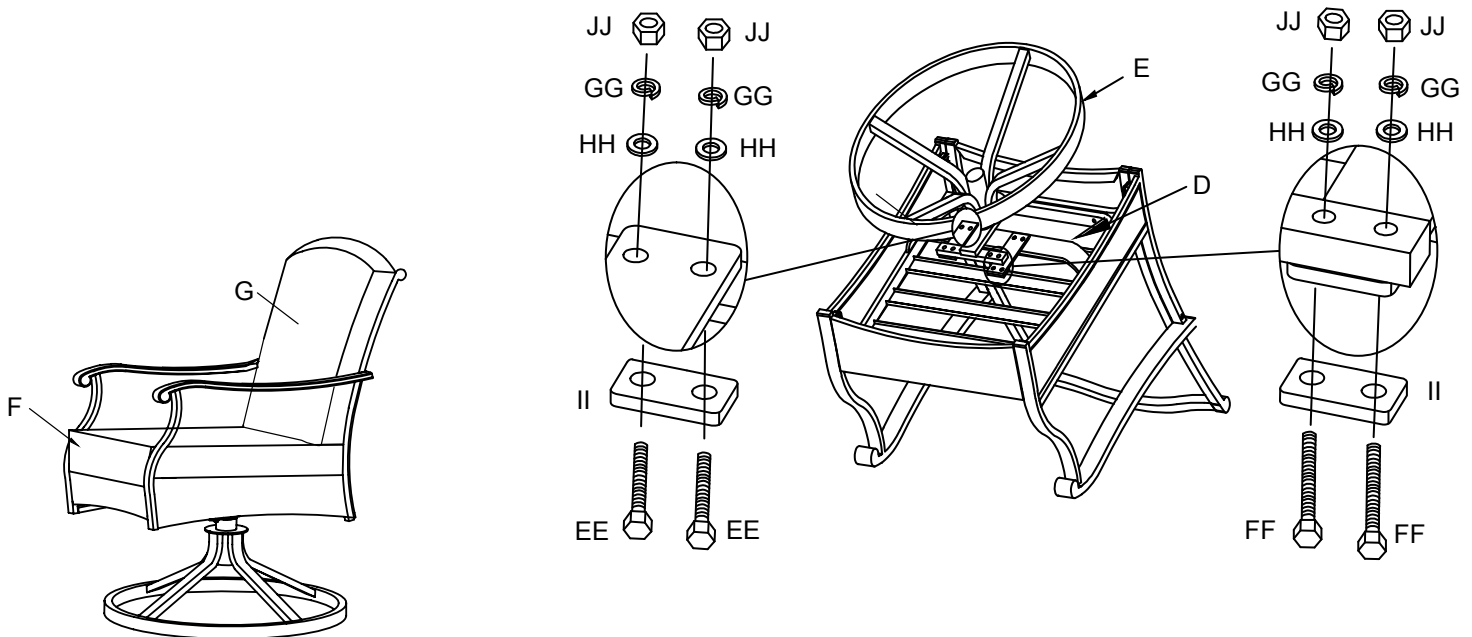


Fig.4

Step 4: Fully tighten all bolts completely. Ensure all connections are secure before use. Place the seat cushion (F), back cushion (G) on the swivel rocker. Please see Fig. 4.








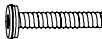




Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905-4107, 8:30 a.m. – 5:00 p.m. PST /11:30 a.m.- 8:00 p.m., EST, Monday- Friday.

Wal-mart.Com Assembly Instruction

Providence 4-Piece Conversation Set - Loveseat, Green/Red

Stock# BH15-092-199-14 / BH15-092-199-15(FRS62227L)

NOTE: Do not completely tighten bolts until all steps are completed.

	PART LIST	DESCRIPTION	QTY
A		Right arm	1
B		Left arm	1
C		Back	1
D		Seat	1
E		Seat cushion	2
F		Back cushion	2
G		Pillow	2
AA		M6x45 Bolt	2
BB		M6x23 Bolt	7
CC		M6 Washer	7
DD	 Thickness 2mm	Plastic washer	6
LL		Allen wrench	use chair's

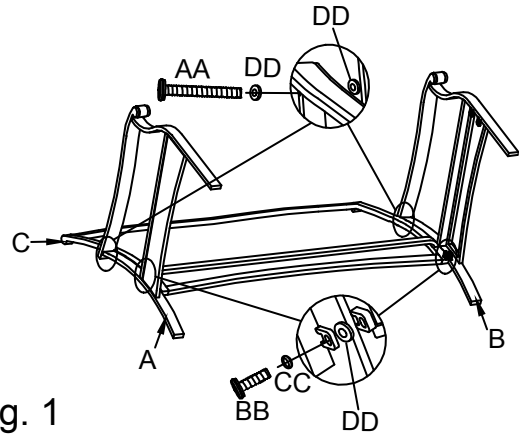


Fig. 1

Step 1: Place the back (C) on a soft surface. Attach the left arm (B) to back (C) by lining up the bolt holes on the left arm (B) with the corresponding bolt holes on the back (C). Insert M6x45 bolts (AA) with plastic washers (DD) as well as M6x23 bolts (BB) and washers (CC&DD). Loosely tighten the bolts with allen wrench (LL). Repeat this step to the right arm (A) and back (C). Please see Fig.1.

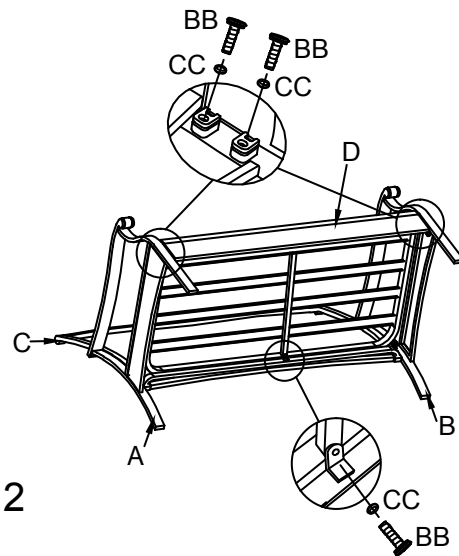


Fig.2

Step 2: Attach the seat panel (D) to the arms (A&B) and the back (C) by lining up screw holes on the back (C) with the corresponding bolt holes on the arms (A&B). Insert M6x23 bolts (BB) and M6 washers (CC). Loosely tighten the bolts with the allen wrench (LL). Do not completely tighten the bolts. Please see Fig.2.

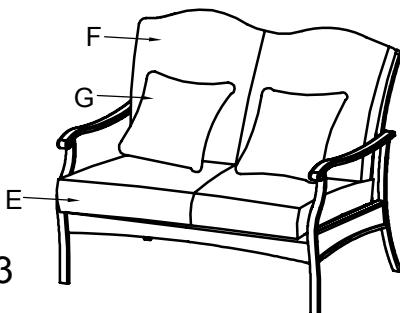


Fig. 3

Step 3: Once all bolts in place, fully tighten all bolts. Turn the loveseat right side up on a flat level surface. Ensure all connections are secure before use. Place the seat cushions (E), back cushions (F) and pillows (G) on the loveseat. Please see Fig. 3.

Wal-mart.Com Assembly Instruction

Providence 4-Piece Conversation Set - Coffee Table

Stock# BH15-092-199-14 / BH15-092-199-15(FTS79082)

NOTE: Do not completely tighten bolts until all steps are completed.





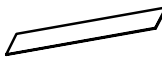






Fig.1

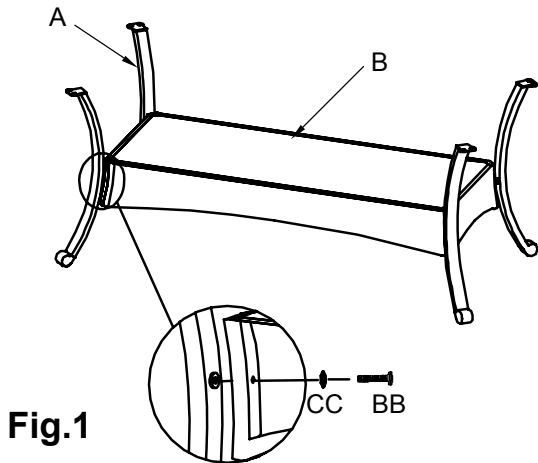Step 1: Place the connecting bracket (B) between the table legs (A). Line up the bolt holes on the connecting bracket (B) with the corresponding bolt holes on the table legs (A). Insert the M6x28 bolts (BB) and M6 washers (CC). Loosely tighten the bolts with allen wrench (LL). Please see Fig. 1.

	PART LIST	DESCRIPTION	QTY
A		Table leg	4
B		Connecting bracket	1
C		Table rim	1
D		Glass	1
AA		M6x15 Bolt	8
BB		M6x28 Bolt	4
CC		M6 Washer	12
LL		Allen wrench	use chair's

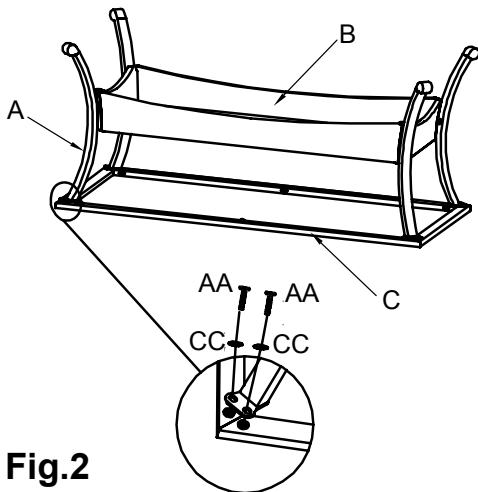


Fig.2

Step 2: Place the table rim (C) upside down on a soft surface. Line up the bolt holes on the table rim (C) with the corresponding bolt holes on the table legs (A). Insert the M6x15 bolts (AA) and M6 washers (CC). Loosely tighten the bolts with allen wrench (LL). Please see Fig. 2.

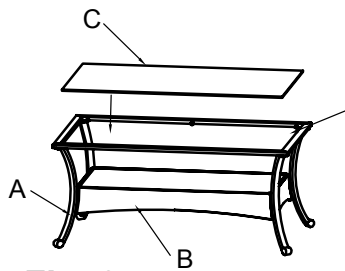


Fig. 3

Step 3: Turn the table right side up. Carefully place the glass (D) on the table rim (C). Please see Fig. 3



Fig.4

Step 4: Tighten all bolts and ensure all connections are secure before use. Please see Fig. 4.