

DO NOT RETURN TO RETAILER

IF YOU HAVE ANY QUESTIONS OR CONCERNS
PLEASE VISIT OUR WEBSITE AT:

www.yotrioint.com

OR TOLL FREE AT:

1-866-905-4107

MONDAY-FRIDAY 8:30 AM TO 5:00 PM PACIFIC STANDARD TIME / 11:30
AM TO 8:00PM EASTERN STANDARD TIME

YOTRIO CUSTOMER CARE

Warranty Coverage Requirements:

1. Copy of your Original Store Receipt.
2. Pictures of the damaged parts.
3. You must know the name of your product and any corresponding item numbers as well as the name of the store where you purchased the item.
4. Please gather all of this information BEFORE you call customer service.

CARE AND MAINTENANCE

- ❖ Before using, wipe the product completely with a soft, dry cloth.
- ❖ Spot-clean Cushions and slings using a sponge, mild soap and water. Rinse thoroughly with clean water. To prevent mildew, allow to air dry completely before using or storing.
- ❖ Never machine wash or tumble dry cushions, slings or umbrella covers as this will result in shrinkage or damage.
- ❖ Rinse wicker patio furniture with a hose or pressure washer. If the wicker is really dirty, you can use mild soap with water. Allow to dry completely before using or storing.
- ❖ To clean your patio umbrella, use a soft brush and mild soap and water. Allow to dry completely before storing.
- ❖ Avoid placing hot objects directly onto table top surface without a heat protector.
- ❖ Always store and/or cover your patio furniture in a cool dry place when not in used and away from direct sunlight.
- ❖ When storing, never wrap cushions in plastic. Plastic doesn't allow the cushion to breathe and can cause it to mildew if there's any moisture present.
- ❖ Always place your patio furniture away from fire, extreme heat, freezing conditions and inclement weather such as rain, hail, sleet, snow or wind.
- ❖ Never use bleach or strong solvents to clean as this will cause damage to both fabric and metal finishes.
- ❖ Do not allow water to build up in frames as this will cause corrosion and damage.

ONE-YEAR FRAME AND ONE-YEAR FABRIC/WICKER/FINISH ETC. LIMITED WARRANTY

You must retain the original receipt to obtain warranty service.

- ❖ Frames are warranted against defects in materials and workmanship for a period of one year from the date of original purchase.
This warranty does not cover damage to frames or welds due to commercial use, improper assembly, acts of nature, fire, freezing and abusive use.
- ❖ Rust, corrosion, and/ or rust stains are not covered by warranty.
- ❖ Purchased parts are not covered under this warranty.
- ❖ Fabric on cushions, slings and umbrella is warranted one year against separation at the seams.
Fading, mildew, and color discoloration due to exposure to the elements, chemicals and spills are not covered.
- ❖ The Powder coat and/ or paint are warranted one year against blistering, peeling, or crackling.
Fading due to exposure to elements, chemicals and spills is not covered. Scratches and chips due to normal wear and use are not covered.
- ❖ Wicker Weave are warranted one year against breakage, separation, or tearing.
Fading or discoloration due to exposure from chemicals, spills and/ or the elements is not covered.
- ❖ Warranty covers free replacement of item within one year of purchase. After the one year it remains the customer's responsibility for freight and packaging charges to and from our service center.
- ❖ We do not compensate the individual or any outside party for assembling or disassembling the product.
- ❖ Any replacement of warranted items will be in the original style and color, or similar style and color if the original is un-available or has been discontinued.
Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905-4107, 8:30 a.m. – 5:00 p.m. PST /11:30 a.m.- 8:00 p.m., EST, Monday- Friday.


Walmart Assembly Instruction

MS Two Person Swing

Stock# MS18-301-004-01 / MS18-301-004-03

NOTE: The M8 bolt cover (GG), M6 bolt cover 1 (HH), M6 bolt cover 2 (II) in step 1 to 6 are only for reference. Please attach them to bolts in step 7.

Package Contents

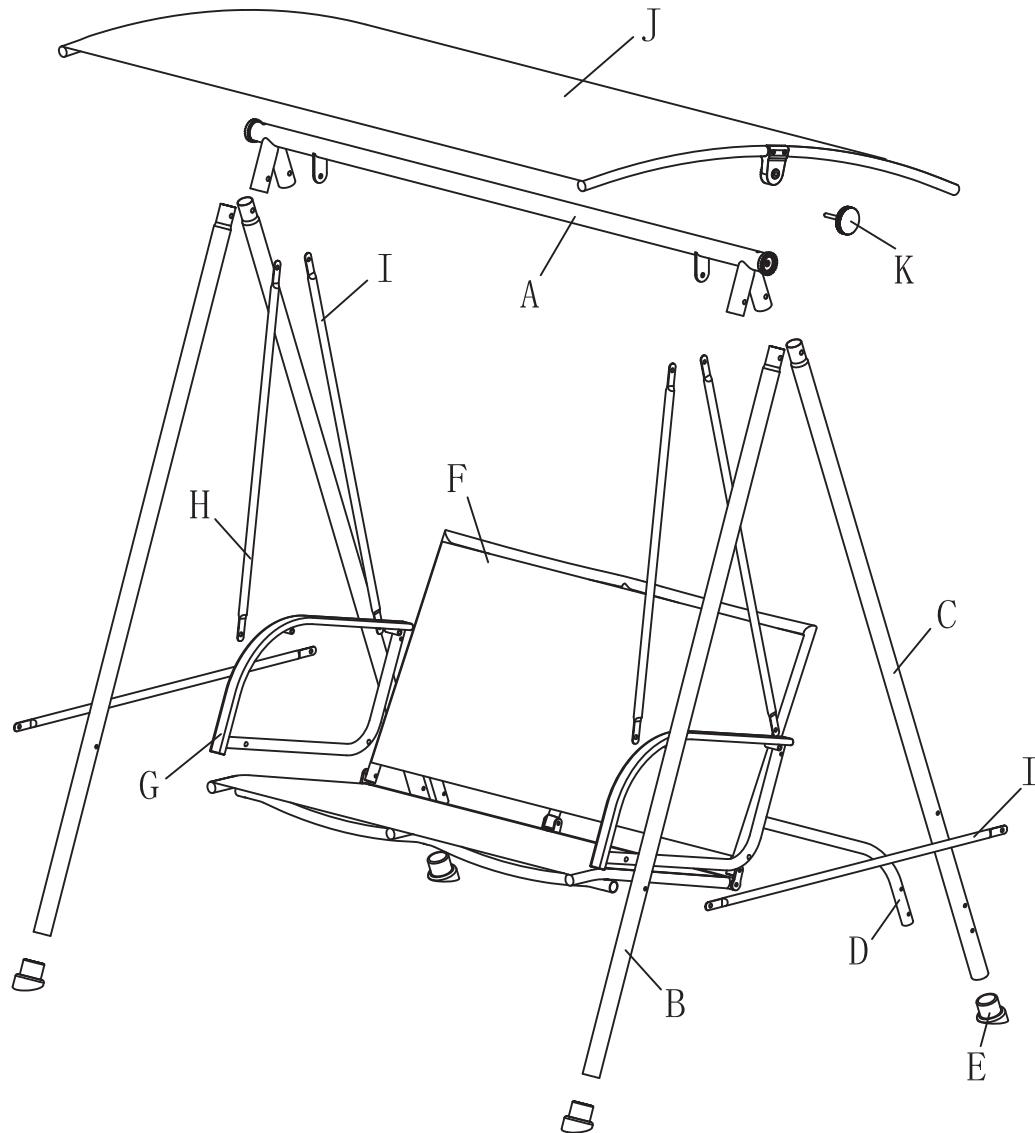

 

 




 
 
 

 
 
 











Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905 - 4107, 8:30 a.m. - 5:00 p.m. PST/11:30 a.m. - 8:00 p.m., EST, Monday - Friday.

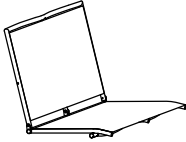Walmart Assembly Instruction

MS Two Person Swing

 Stock# MS18-301-004-01 / MS18-301-004-03

 NOTE: The M8 bolt cover (GG), M6 bolt cover 1 (HH), M6 bolt cover 2 (II) in step 1 to 6 are only for reference. Please attach them to bolts in step 7.

PART NO.	PICTURE	DESCRIPTION	QTY
A		Top bar	1
B		Front leg	2
C		Rear leg	2
D		Leg connector	1
E		Foot cap	4
F		Seat&back	1
G		Arm	2
H		Short hanging bar	2
I		Long hanging bar	4
J		Canopy	1
K		Knob	2
AA		M8x40 bolt	4+1
BB		M6x70 bolt	4+1
CC		M6x50 bolt	14+1
DD		M8 washer	4+1
EE		M6 washer	34+1
FF		M6 nut	16+1
GG		M8 Bolt Cover	4+1
HH		M6 Bolt cover 1	18+1
II		M6 Bolt cover 2	16+1
JJ		Plastic washer	2+1
KK		Hook	2
LL		Allen wrench	1
MM		Wrench 	1

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905 - 4107, 8:30 a.m. - 5:00 p.m. PST/11:30 a.m. - 8:00 p.m., EST, Monday - Friday.


Walmart Assembly Instruction

MS Two Person Swing

Stock# MS18-301-004-01 / MS18-301-004-03


NOTE: The M8 bolt cover (GG), M6 bolt cover 1 (HH), M6 bolt cover 2 (II) in step 1 to 6 are only for reference. Please attach them to bolts in step 7.

Step 1

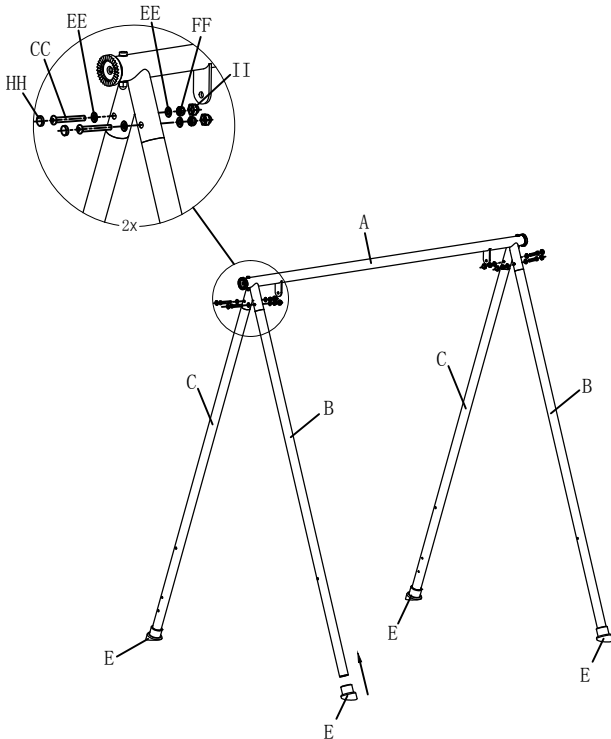

- Step 1:
- Insert the front leg (B) and the rear leg (C) into the top bar (A), Connect with the M6 x 50 bolt (CC), the M6 washer (EE) and the M6 nut (FF) as shown in the picture. Loosely tighten by hand.
 - Insert the foot cap (E) into the leg (B&C).

Step 2

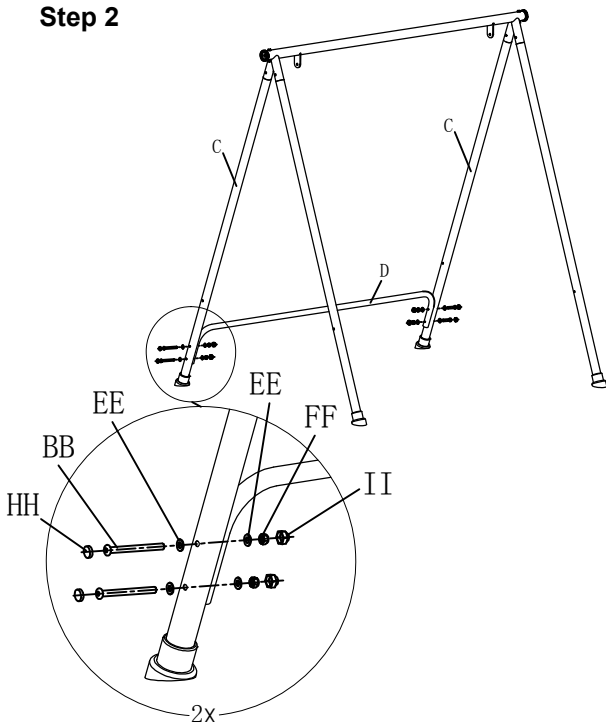

- Step 2:
- Attach the leg connector (D) to the rear leg (C), using the M6 x 70 bolt (BB), the M6 washer (EE) and the M6 nut (FF) as shown in the picture.
 - Loosely tighten by hand.

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905 - 4107, 8:30 a.m. - 5:00 p.m. PST/11:30 a.m. - 8:00 p.m., EST, Monday - Friday.


Walmart Assembly Instruction

MS Two Person Swing

Stock# MS18-301-004-01 / MS18-301-004-03

NOTE: The M8 bolt cover (GG), M6 bolt cover 1 (HH), M6 bolt cover 2 (II) in step 1 to 6 are only for reference. Please attach them to bolts in step 7.


Step 3

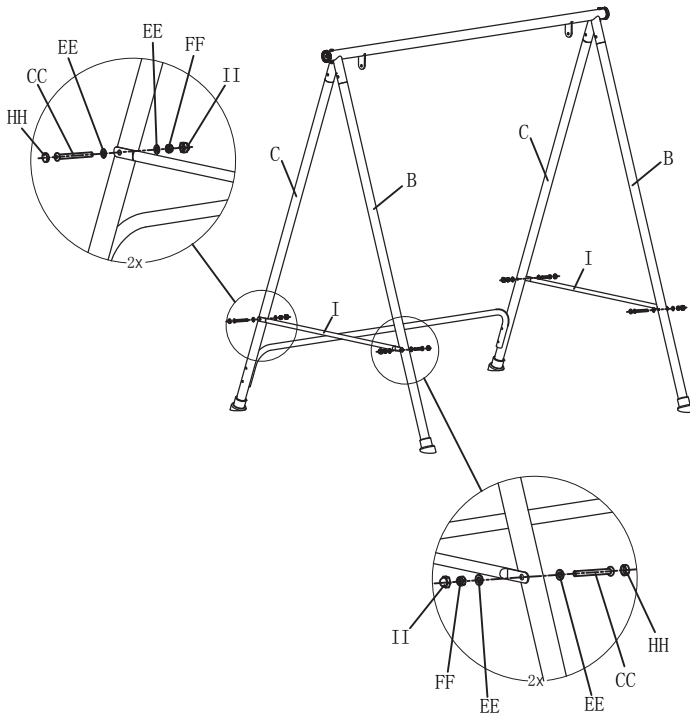

Step 3:

- Connect the front leg (B) and rear leg (C) with the long hanging bar (I), using the M6 x 50 bolt (CC), the M6 washer (EE) and the M6 nut (FF) as shown in the picture.
- Fully tighten all bolts from step 1 to 3 with Allen wrench (LL) and wrench (MM).

Step 4

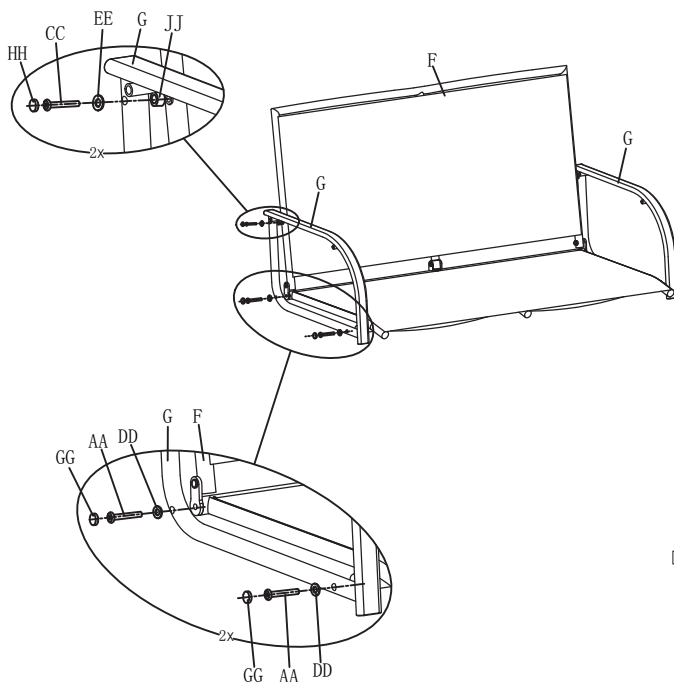

Step 4:

- Attach the arm (G) to the back of seat & back (F), using the M6 x 50 bolt (CC), the M6 washer (EE) and the plastic washer (JJ).
- Attach the arm (G) to the seat, using the M8 x 40 bolt (AA) and the M8 washer (DD). Loosely tighten by hand.

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905 - 4107, 8:30 a.m. - 5:00 p.m. PST/11:30 a.m. - 8:00 p.m., EST, Monday - Friday.


Walmart Assembly Instruction

MS Two Person Swing

Stock# MS18-301-004-01 / MS18-301-004-03

NOTE: The M8 bolt cover (GG), M6 bolt cover 1 (HH), M6 bolt cover 2 (II) in step 1 to 6 are only for reference. Please attach them to bolts in step 7.


Step 5

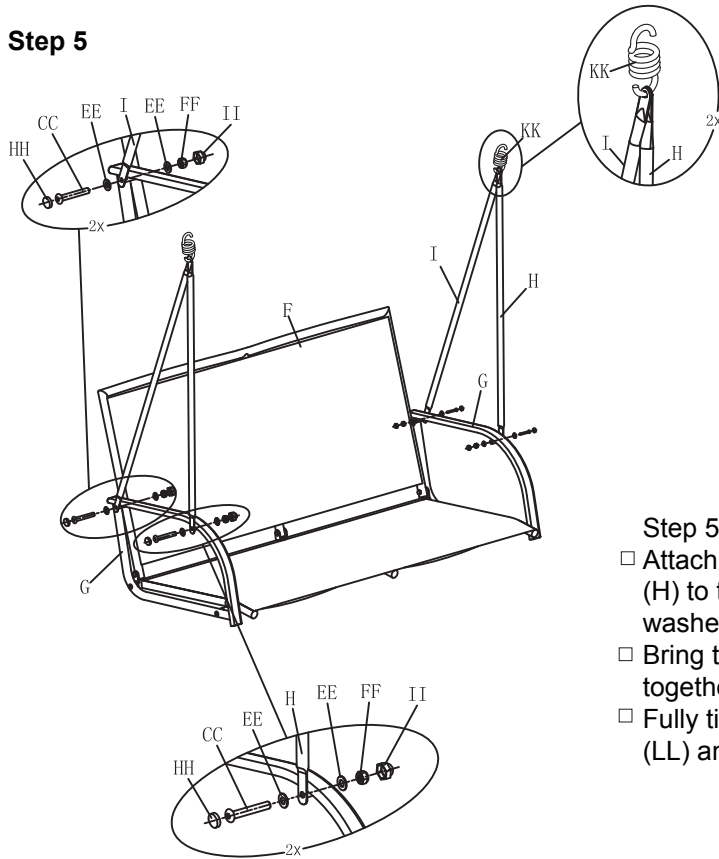

Step 5:

- Attach the long hanging bar (I) and the short hanging bar (H) to the arm (G), using the M6 x 50 bolt (CC), the M6 washer (EE) and the M6 nut (FF). Loosely tighten by hand.
- Bring the holes in the free ends of hanging bars (H & I) together and thread them onto the hook (KK).
- Fully tighten all bolts from step 4 to 5 with Allen wrench (LL) and wrench (MM).

Step 6

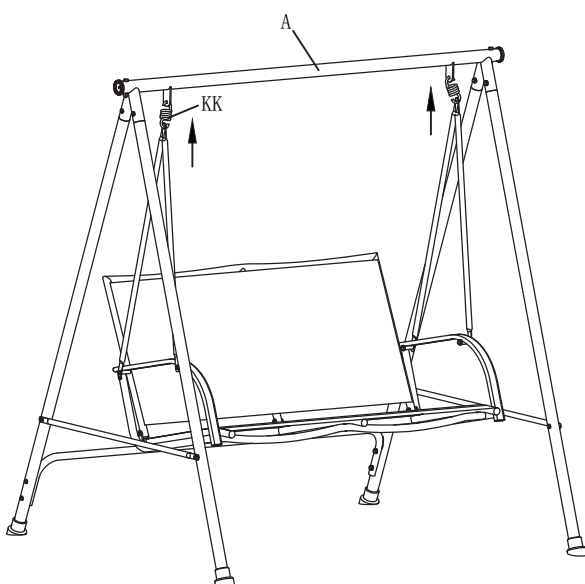

Step 6:

- Hang the hook (KK) in the holes on the top bar (A).

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905 - 4107, 8:30 a.m. - 5:00 p.m. PST/11:30 a.m. - 8:00 p.m., EST, Monday - Friday.


Walmart Assembly Instruction

MS Two Person Swing

Stock# MS18-301-004-01 / MS18-301-004-03

NOTE: The M8 bolt cover (GG), M6 bolt cover 1 (HH), M6 bolt cover 2 (II) in step 1 to 6 are only for reference. Please attach them to bolts in step 7.

Step 7

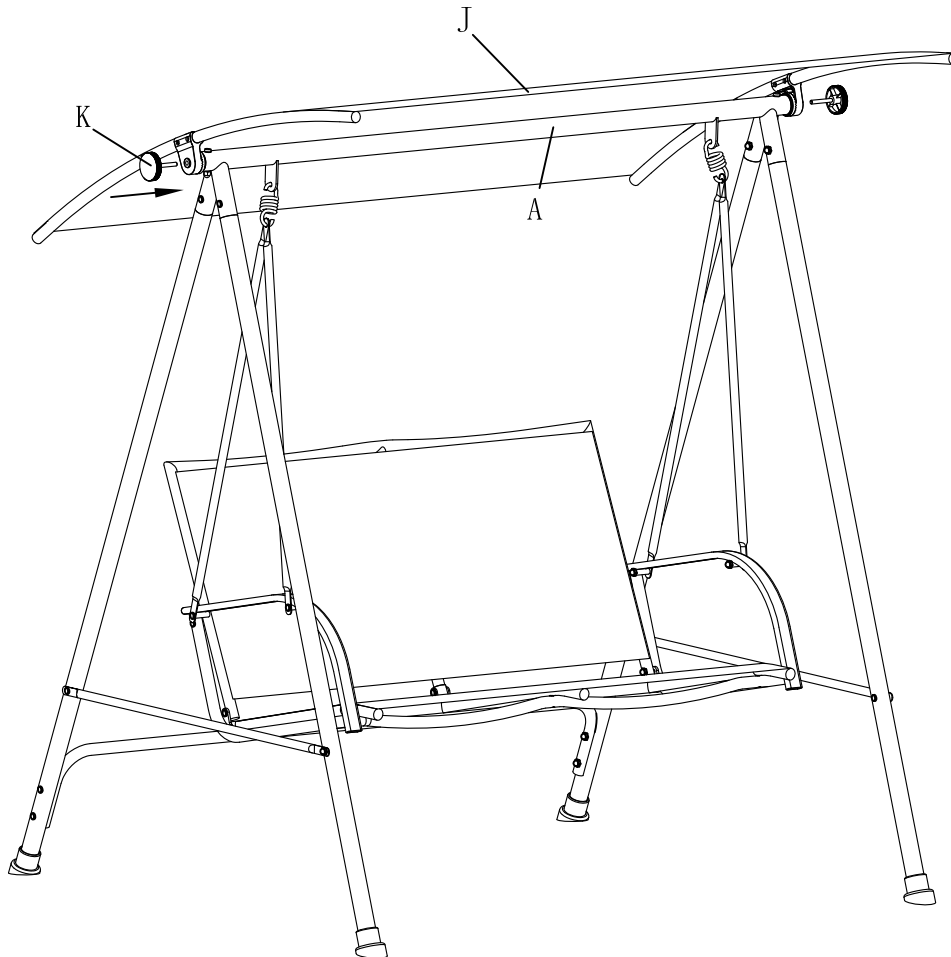

Step 7:

- Attach the canopy (J) to the top bar (A).
- Insert the knob (K), turning the knob (K) clockwise tightly.
- Ensure all connections are secure before use.
- Attach the M8 bolt cover (GG), M6 bolt cover 1 (HH), M6 bolt cover 2 (II) to all bolts as shown in previous pictures.

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905 - 4107, 8:30 a.m. - 5:00 p.m. PST/11:30 a.m. - 8:00 p.m., EST, Monday - Friday.