

**WARNING**  
**FOR YOUR SAFETY:**  
 For Outdoor Use Only (outside, non-enclosed area). Do Not Use For Cooking.  
 Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

**WARNING**  
**FOR YOUR SAFETY:**

- ⚠ If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.
- ⚠ **WHAT TO DO IF YOU SMELL GAS:**
  - Do NOT try lighting any appliance.
  - Do NOT touch any electrical switch; do NOT use any phone in your building.
  - Immediately call your gas supplier from a neighbor's phone.
  - Follow the gas supplier's instructions.
  - If you cannot reach your gas supplier, call the fire department.
- ⚠ Installation and service must be performed by a qualified installer, service agency or gas supplier.
- ⚠ **INSTALLER:** Leave this manual with the appliance. **CONSUMER:** Retain this manual for future reference.
- ⚠ If you are assembling this unit for someone else, give this manual to him or her to read and save for future reference.

**WARNING**  
**FOR YOUR SAFETY:**

- ⚠ Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
- ⚠ Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.

**DANGER**

If you smell gas:

1. Shut off gas to appliance.
2. Extinguish any open flame.
3. If odor continues, leave the area immediately.
4. After leaving the area, call your gas supplier or fire department.

Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.

**WARNING**  
**FOR YOUR SAFETY:**


1. Do NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.
2. An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

**DANGER**

Do NOT leave this appliance unattended while it is in operation.

Walmart  
 BHG Harbor City Fire Dining Table  
 Stock# BH19-092-097-26 / FHWS80029

**Important Safety Information**

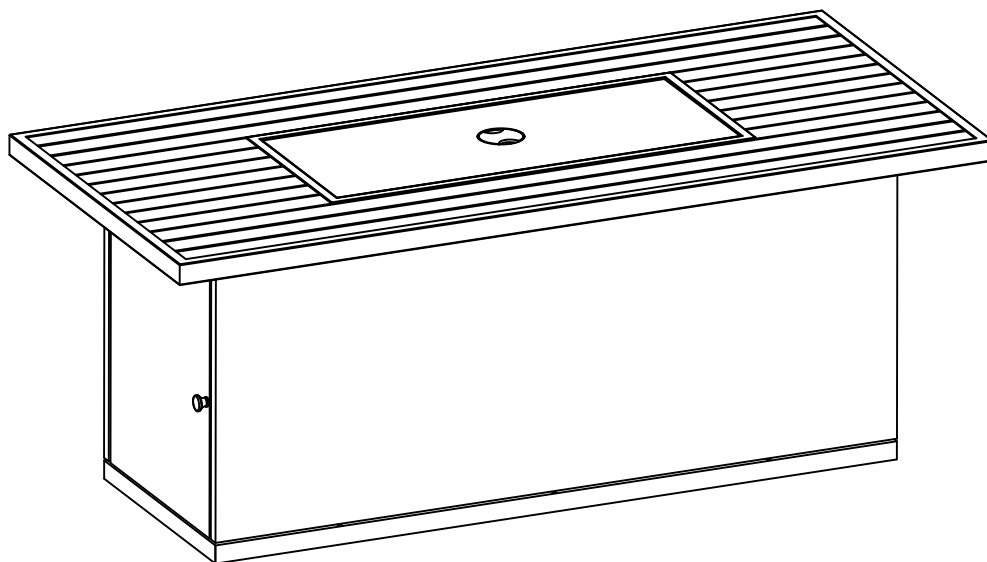

<b>DANGER</b>	<b>CARBON MONOXIDE HAZARD</b>
	<ul style="list-style-type: none"> <li>• This appliance can produce carbon monoxide which has no odor.</li> <li>• Using it in an enclosed space can kill you.</li> <li>• Never use this appliance in an enclosed space such as a camper, tent, car or home.</li> </ul>

Table of Contents	
Important Safety Information .....	2
Propane (LP) Dangers and Warnings .....	3
Hose & Regulator Assembly and Replacement .....	5
Parts List .....	6
Assembly Instructions .....	8
Fire Pit Installation .....	17
Operating Instructions .....	26
Cleaning and Care .....	27
Warranty .....	28
Troubleshooting .....	29
<p>This appliance complies with "ANSI Z21.97-2017/CSA 2.41-2017, Outdoor Decorative Gas Appliances."            California Proposition 65: This product can expose you to carbon monoxide, which is a combustion by product known to the State of California to cause cancer birth defects or other reproductive harm. For more information go to <a href="http://www.P65Warnings.ca.gov">www.P65Warnings.ca.gov</a>.            California Proposition 65: Handling the brass material on this product can expose you to Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling. For more information go to <a href="http://www.P65Warnings.ca.gov">www.P65Warnings.ca.gov</a>.</p>	



## IMPORTANT SAFETY INFORMATION



### WARNING FIRE TABLE IS FOR OUTDOOR USE ONLY

**Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that the control compartment, burners and circulating air passageways of the appliance are kept clean.**

**WARNING** Failure to follow the dangers, warning and cautions in this manual may result in serious bodily injury or death, or in a fire or an explosion causing damage to property.

**IMPORTANT NOTICE** Read and understand all warnings and precautions prior to assembly and use of your gas fire table. Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.

**Note** The use and installation of this product must conform to local codes. In the absence of local codes, use the National Fuel Gas Code, ANSI Z223.1/NFPA54. Reference to Natural Gas and Propane Installation code CSA B149.1 or Propane Storage and Handling code B149.2.

#### **Minimum Clearance from Unit to Combustible Materials**

61" (155.1cm) from the top: 48" (121.9cm) from all sides and back. Do not locate this fire table under any overhead enclosure.

#### **IF YOU SMELL GAS**

- Shut off gas supply to the fire table.
- Extinguish any open flame.
- Do not try lighting any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone.
- Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

**Children and adults should be alerted to the hazards of high surface temperatures and be kept at a safe distance while fire table is in use. This outdoor fire table is not to be operated by children.**

**Young children should be closely supervised when in the vicinity of this outdoor fire table.**

**Do not hang or place clothing or other flammable materials on or near the gas fire table.**

**Any guard or protective device removed for servicing the appliance shall be replaced prior to operating the appliance.**

- Keep these instructions for future reference. If you are assembling this unit for someone else, give this manual to him or her to read and keep for future reference.
- This gas fire table must be used **ONLY** outdoors in a well-ventilated space and shall **NOT** be used inside a building, garage, or any other enclosed area.
- **DO NOT** use this outdoor gas fire table for indoor heating. **TOXIC** carbon monoxide fumes can accumulate and cause asphyxiation.
- **NEVER LEAVE** this gas fire table unattended when in use.
- This unit is to be used with propane gas & natural gas only! (sold separately).
- Do not use a flame to check for gas leaks.
- Do not store or use gasoline or other flammable vapors and liquids within 25 feet (7.62m) of this or any other appliance.
- Do not store any combustible materials in the base enclosure.
- The use of alcohol, prescription or non-prescription drugs may impair an individual's ability to properly assemble or safely operate this outdoor fire table.
- **DO NOT** use in an explosive atmosphere. Keep gas fire table area clear and free from combustible materials, gasoline and other flammable vapors and liquids.
- This outdoor fire table is not to be installed or used in or on recreational vehicles and/or boats.
- Always use in accordance with all applicable local, state and national codes. Contact your local fire department for details on outdoor burning.

---

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905-4107, 8:30 a.m. – 5:00 p.m. PST / 11:30 a.m.- 8:00 p.m., EST, Monday- Friday.

## IMPORTANT SAFETY INFORMATION (continued)

- Use the same precautions you would with any open fire when using this outdoor fire table.
- DO NOT burn solid fuels such as: wood, charcoal briquettes, lump charcoal, manufactured logs, driftwood, trash, leaves, paper, cardboard, plywood, painted or stained or pressure treated wood in this outdoor fire table.
- DO NOT paint or color any part of this heating unit.
- DO NOT use this outdoor fire table until it is COMPLETELY assembled and all parts are securely fastened and tightened.
- DO NOT store another LP gas tank within 10 feet (3.05 m) of this outdoor fire table while it is in operation.
- DO NOT use this outdoor fire table near automobiles, trucks, vans or recreational vehicles.
- DO NOT use this outdoor fire table under any overhead structure or near any unprotected combustible constructions. Avoid using near or under overhanging trees and shrubs.
- Always use this outdoor fire table on a hard, level non-combustible surface such as concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose.
- DO NOT use this outdoor fire table if any part has been under water. Immediately call a qualified service technician to inspect the fire table and to replace any part or control system and any gas control which has been under water. Always remove protective cover before operating (if applicable).
- DO NOT set the protective cover over the unit until it is turned off and completely cooled down.
- DO NOT use in windy conditions.
- Keep all electrical cords away from a hot outdoor fire table.
- Certain areas of this outdoor fire table when in use will become too hot to touch. Do not touch hot surfaces until the unit has cooled unless you are wearing protective gear such as insulated pot holders or heat resistant gloves or mittens to avoid burns.
- DO NOT attempt to move or store this outdoor fire table until all parts are cool. DO NOT lean over this outdoor fire table when lighting or when in use.
- Use only the regulator and hose assembly provided. The replacement regulator and hose assembly shall be that specified by the manufacturer.
- DO NOT attempt to disconnect the gas regulator from the tank or any gas fitting while the outdoor fire table is in use.
- Always shut off the supply at the tank valve and disconnect regulator from the tank when the fire table is not in use.
- DO NOT sit on the fire table when the unit is in operation.
- DO NOT throw anything onto the fire when the unit is in operation.
- Glass beads are very hot; please keep children or pets at a safe distance.
- It is essential to keep the outdoor fire table valve compartment, burners, and circulating air passages clean. Inspect outdoor fire table before each use.
- Check for leaks after not using the unit for long periods of time.
- Prior to each fire table operation, check the hose for evidence of excessive abrasion or wear by looking through the visual check hole. If the hose is damaged, cracked or cut, it must be replaced before using the gas fire table. The hose assembly can only be replaced with a hose assembly specified by the manufacturer. Please call customer service department at: (866) 905-4107.
- Before each use, remove the glass media. Examine the burner and its components. If dirty, clean with a soft brush and soapy water solution. Also examine the area around the burner. Any dirt or foreign material, such as spider webs or nests in this area should be removed. If it is evident that the burner is damaged, the fire table must not be used. The burner assembly can not be replaced. Please contact customer service department at: (866) 905-4107 for technical support.
- Place the hose out of the pathways where people may trip over it (if using external tank). Do not place the hose in areas where it may be subjected to accidental damage.

**ATTENTION:** : Any alteration of the outdoor fire table that is not specifically directed in the operations manual will void manufacturer.

## PROPANE (LP) DANGERS AND WARNINGS

### LP GAS

LP gas is flammable and hazardous if handled improperly. Become aware of the characteristics before using any LP gas product.

#### **Propane Characteristics:**

- Flammable, explosive under pressure, heavier than air and settles in pools in low areas.

# PROPANE (LP) DANGERS AND WARNINGS

## Propane Characteristics

- In its natural state, propane has no odor. For your safety, an odorant has been added.
- Contact with propane could burn your skin.
- Propane is extremely flammable and hazardous if handled improperly.

## LP GAS WARNINGS:

- Cylinders must be stored outdoors in a well-ventilated area out of reach of children.
- Disconnected cylinders must have threaded valve plugs tightly installed and must not be stored in a building, garage or any other enclosed area.
- Never use a propane cylinder with a damaged body, valve, collar or footing.
- Dented or rusted propane cylinders may be hazardous and should be checked by your propane gas supplier.
- Be sure to use only one 20 lb (9.1 kg) LP gas cylinder with a Type 1 valve with this appliance as required by the American National Standards Institute (ANSI) and the Canadian Standards Steering Committee.
- Only tanks marked "propane" may be used.
- The LP gas supply tank must be constructed and marked in accordance with the Specifications for LP gas tanks of the U.S. Department of Transportation (DOT) or the National standard of Canada, CAN/CSA-B339, LP gas tanks, Spheres and Tubes for the Transportation of Dangerous Goods.
- LP gas tank must be arranged for vapor withdrawal.
- The LP gas tank must have a listed overfilling prevention device (OPD) and a QCCI or Type I (CGA810) LP gas tank connection.
- The LP gas tank must have a tank collar to protect the tank valve.
- LP gas cylinder must contain a shut-off valve as specified in the standard for compressed gas cylinder valve outlet and inlet and inlet connection, ANSI/CGA-V-1-1977, CSA B96.
- Never use an LP gas tank with a damaged body, valve, collar, or footing. Dented or rusted LP gas tanks may be hazardous and should be checked by your LP gas supplier prior to use.
- The LP gas tank should not be dropped or handled roughly.
- Tanks must be stored outdoors out of the reach of children. Do NOT store in a building, garage, or any other enclosed area.
- Never store your LP gas tank where temperatures can reach over 125°F.
- Do not store the LP gas cylinder in direct sunlight or near a source of heat or combustion.
- Never keep a filled LP gas tank in a hot car or car trunk. Heat will cause the gas pressure to increase, which may open the relief valve and allow gas to escape.
- Place dust cap on valve outlet whenever the LP gas tank is not in use. Only install the type of dust cap on the LP gas tank valve outlet that is provided with the LP gas tank valve. Other types of caps or plugs may result in leakage of propane.
  - a. Do not store a spare LP gas cylinder under or near this appliance.
  - b. Never fill the LP gas cylinder beyond 80% full.
  - c. If the information in (a) and (b) is not followed exactly, a fire causing death or serious injury may occur.
- LP gas cylinders should be filled only by a certified LP gas dealer.
- The pressure regulator is set for 11 inches of water column (pressure).
- The maximum inlet propane gas pressure for this outdoor fire table is 250 psi.
- The minimum inlet propane gas pressure for this outdoor fire table is 25 psi.
- Never attempt to attach this appliance to the self-contained LP gas system of a camper trailer, motor home or house.
- Always use the pressure regulator and hose assembly provided with the appliance to connect to a LP gas cylinder. Never connect to an unregulated LP gas supply. For technical support contact customer service at (866) 905-4107.
- Hand turn the manual gas control valve. Never use tools. If the valve will not turn by hand, do not try to repair it. Call a Certified Gas Technician. The use of force or any self attempted repair may result in a fire or explosion.

## Connecting your gas cylinder:


Before connection, be sure that there is no debris caught in the head of the gas cylinder, head of the regulator valve or in the head of the burner and burner ports. Connect regulator valve and hand-tighten firmly. Disconnect the propane cylinder from the regulator valve when the fire table is not in use. DO NOT obstruct the flow of combustion air and ventilation air to the burner.

## HOSE & REGULATOR ASSEMBLY AND REPLACEMENT

1. This fire table comes equipped with a standard LP gas hose and regulator including the appliance side connection for a CGA No 791 Cylinder Connection Device. The LP gas hose and regulator supplied with this fire table must be used. Only a hose and regulator specified by manufacturer can be used for replacement.
  - a. The CGA No 791 connection incorporates a magnetic flow limiting device that acts to limit the flow of gas if a leak is detected between the regulator and the burner valve.
  - b. If the burner valve is open prior to the LP gas cylinder service valve being opened, the connection will interpret this free flow of gas to be a leak.
  - c. The connection safety feature will reduce gas flow from the regulator to the appliance to a minimal level.
  - d. Be sure that the burner control valve is closed prior to opening the LP gas cylinder service valve to ensure that the connection flow limiting device is not triggered mistakenly.
  - e. If the connection flow limiting device is triggered mistakenly, close the LP gas cylinder service valve and the burner valve, wait 10 seconds to allow the device to reset, open the cylinder service valve, then open the burner valve and light the fireplace as per lighting instructions.
2. Be sure to protect the hose from any hot surfaces. Serious danger may result if the hose contacts any hot surface.
3. Regular maintenance of the hose and regulator:
  - a. Inspect the hose before each use of the fire table. If the hose shows signs of cracks, abrasions, cuts or damage of any kind, do not operate the appliance. Fix or replace the hose as required before using the appliance. For assistance with repair or replacement of the hose, call customer service at (866) 905-4107. Use only replacement parts from the manufacturer.
  - b. Inspect the seal inside the CGA No 791 service valve on the LP gas cylinder when replacing the cylinder or at least once per year. If there is any indication of damage, have the seal replaced by a certified gas dealer before operating the appliance.
4. Do not use tools to tighten the CGA No 791 connection nut onto the LP gas cylinder service valve. Hand tighten only.
5. Be careful to not cross the threads on the connection when tightening the CGA No 791 connection on to the LP gas cylinder service valve.
6. "Leak Test" should always be performed after attaching the connection to the LP gas cylinder service valve. (See "Checking for Leaks" section of this manual on page 20).
7. For the connection of the hose and regulator to the LP tank, refer to the "Connection" section of the LP gas cylinder section above.

### Glass Media Warning:

1. Media may have sharp edges. Wear safety glasses and gloves when handling.
2. Do not change or substitute the media material provided with this fire pit. If replacing, use only replacement glass media available from your local authorized dealer/distributor.
3. Pour the glass media evenly in to the burner area (with the exception of the screen-if applicable). The glass should be 1/2-1" above the burner.

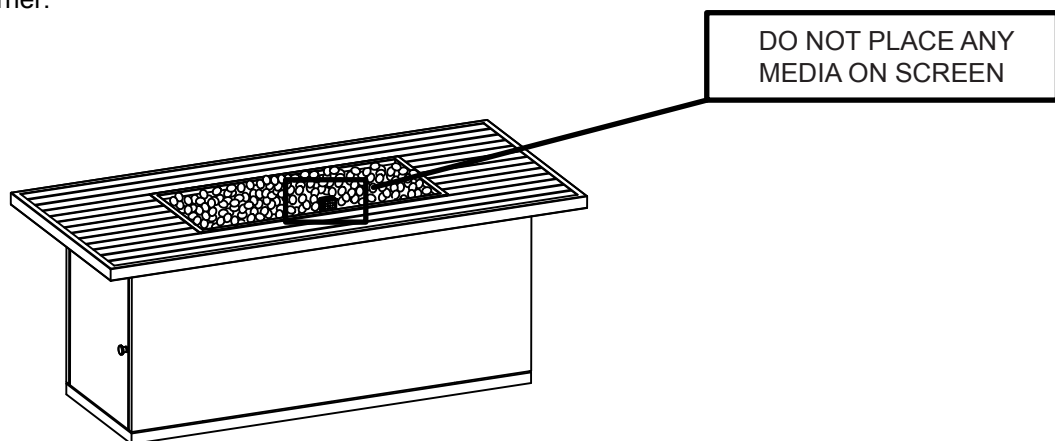

4. **IMPORTANT:** Do not exceed a height of 1" above the burner when placing glass media. Ensure no media covers the igniter screen. Store any excess media in a safe location.
5. Keep away from the unit for the first 20 minutes after igniting your unit for the first time, as lava rocks/pumice stones /glass shards/glass beads could pop out and cause injury. Should any rocks pop out, discard them.
6. Always ensure that lava rocks/pumice stones/glass shards/glass beads are completely dry before use. Failure to do so will cause them to crack or pop.


---

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905-4107, 8:30 a.m. – 5:00 p.m. PST /11:30 a.m.- 8:00 p.m., EST, Monday- Friday.

# Wal-Mart Assembly Instructions

Vendor stock No. BH19-092-097-26

## Parts List

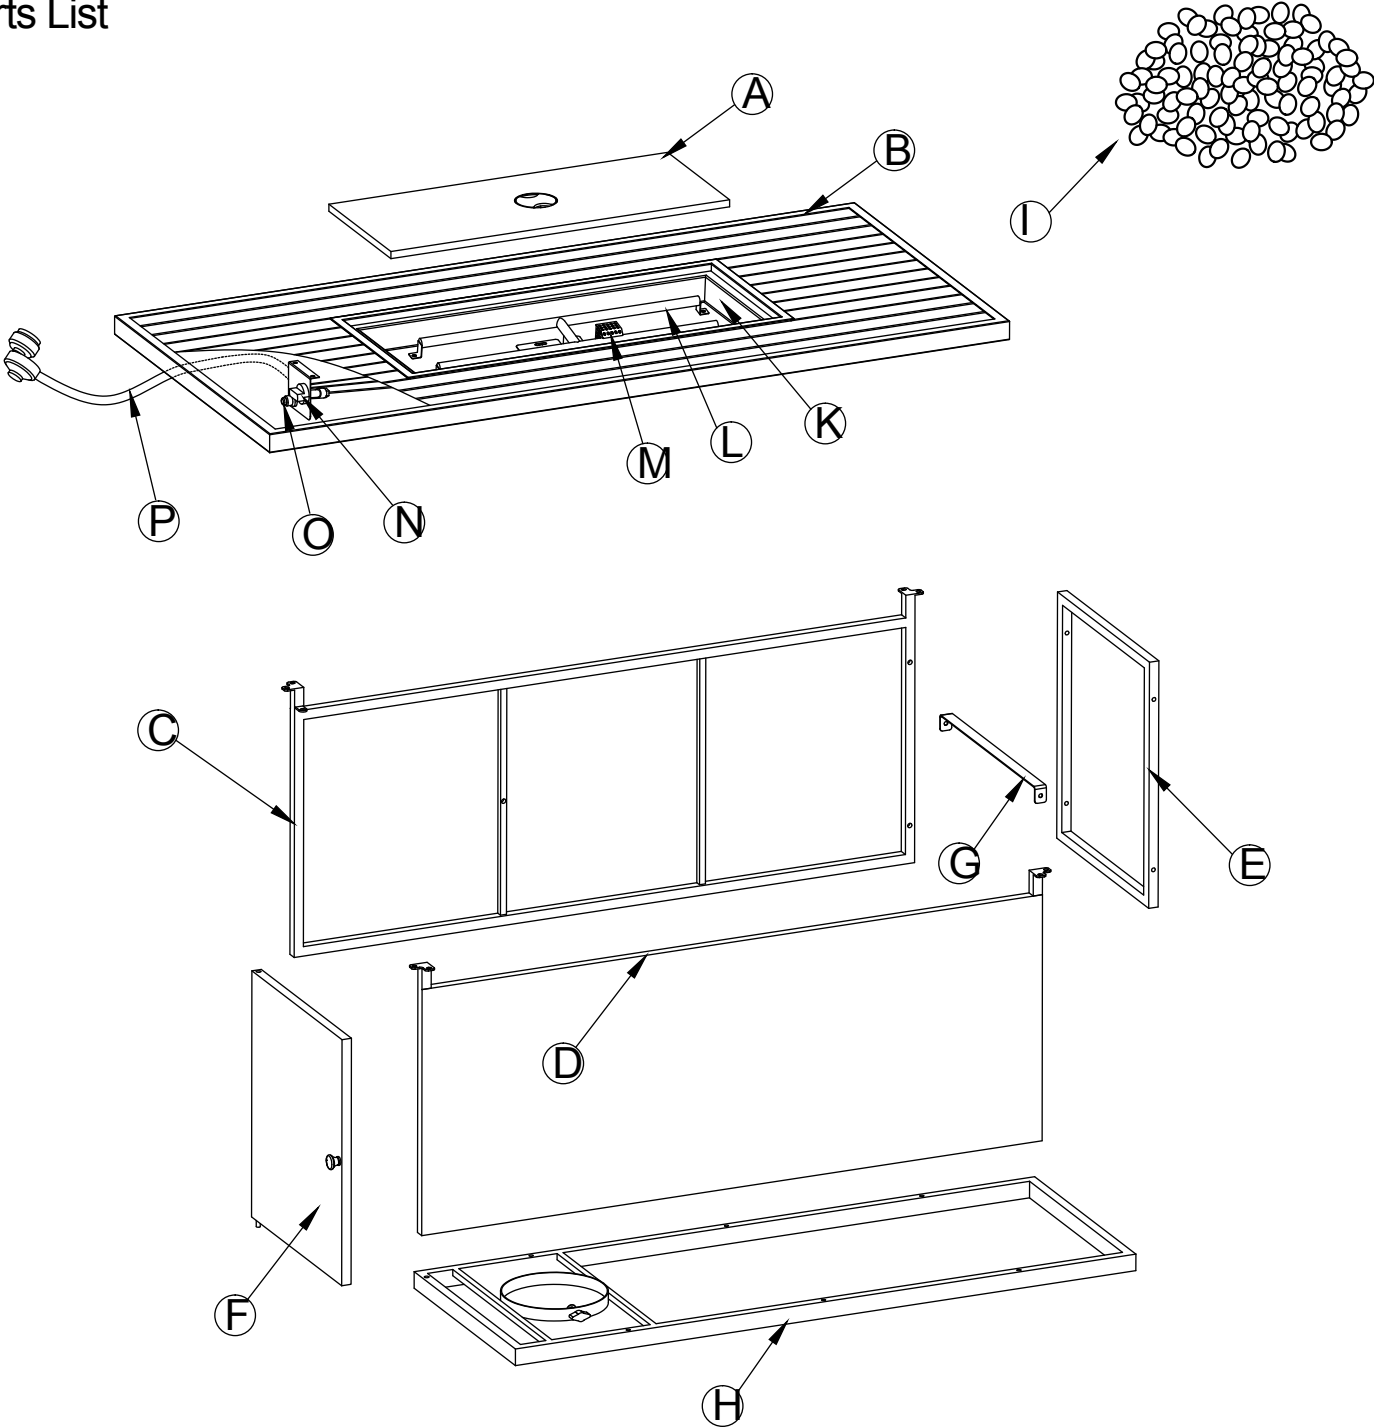








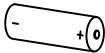

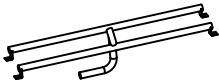




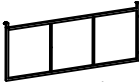

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905-4107, 8:30 a.m. – 5:00 p.m. PST /11:30 a.m.- 8:00 p.m., EST, Monday- Friday.

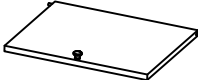


 
 
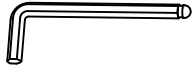
# Wal-Mart Assembly Instructions

Vendor stock No. BH19-092-097-26

## Package Contents

PARTS NO	QTY	DESCRIPTION	
<b>A</b>	<b>1</b>		Lid
<b>B</b>	<b>1</b>		Table Top
<b>C</b>	<b>1</b>		Left Panel
<b>D</b>	<b>1</b>		Right Panel
<b>E</b>	<b>1</b>		Rear Panel
<b>F</b>	<b>1</b>		Door
<b>G</b>	<b>1</b>		Connector bar
<b>H</b>	<b>1</b>		Base
<b>I</b>	<b>1 Bag</b>		Glass Media
<b>J</b>	<b>1</b>		Battery
<b>K</b>	<b>1</b>		Burner Bowl
<b>L</b>	<b>1</b>		Burner
<b>M</b>	<b>1</b>		Pilot Housing
<b>N</b>	<b>1</b>		Switch Knob
<b>O</b>	<b>1</b>		Flame Ignitor
<b>P</b>	<b>1</b>		Regulator/Hose

## Hardware Contents

PARTS NO	QTY	DESCRIPTION	
<b>AA</b>	<b>10+1</b>		M6x15 Bolt & Washer
<b>BB</b>	<b>4+1</b>		M6x45 Bolt & Washer
<b>CC</b>	<b>6+1</b>		M6x55 Bolt & Washer
<b>DD</b>	<b>1+1</b>		Bolt
<b>EE</b>	<b>2+1</b>		Plastic Washer
<b>FF</b>	<b>1</b>		Allen Wrench

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905-4107, 8:30 a.m. – 5:00 p.m. PST /11:30 a.m.- 8:00 p.m., EST, Monday- Friday.

# Wal-Mart Assembly Instructions


## Fire Pit Assembly

Vendor stock No. BH19-092-097-26

### STEP 1

Place the table top (B) on a flat soft surface.

Line up the corresponding bolt holes on the table top (B) and the left panel (C). Attach with M6x15 bolt and washer (AA). Tighten bolts (AA) with Allen wrench (FF).

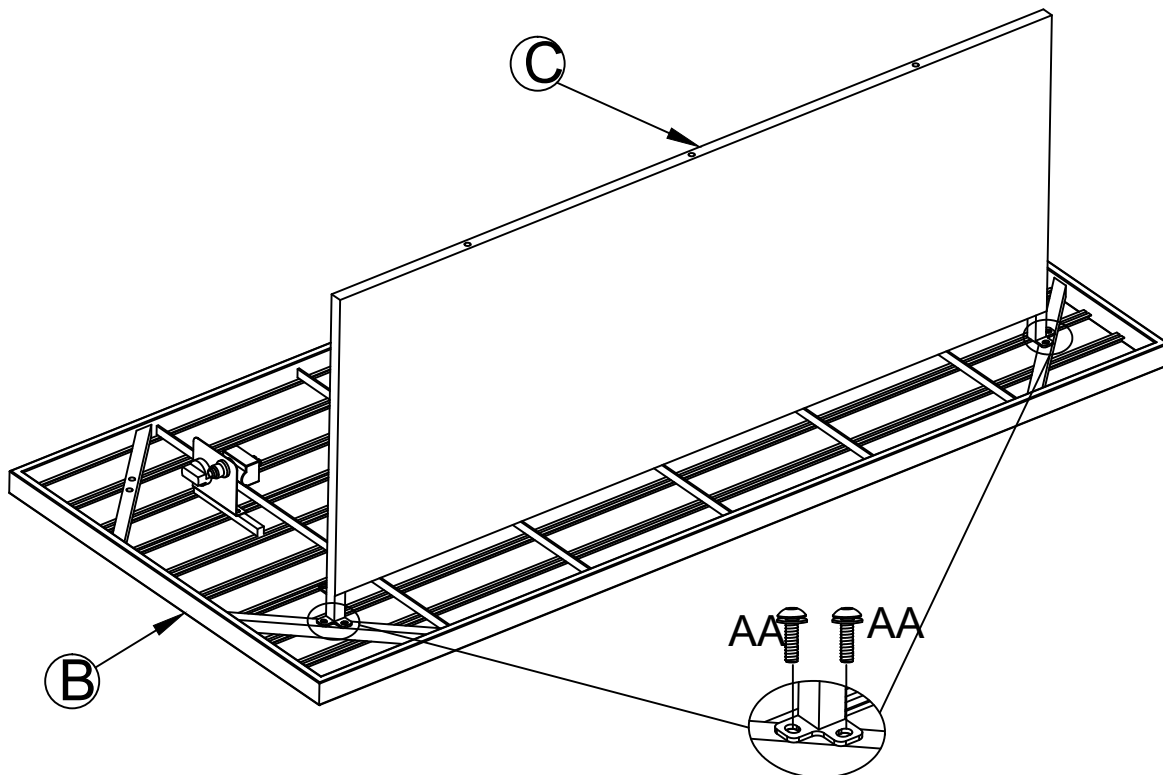




# Wal-Mart Assembly Instructions

## Fire Pit Assembly

Vendor stock No. BH19-092-097-26

### STEP 2

Line up the corresponding bolt holes on the table top (B) and the right panel (D).  
Attach with M6x15 bolt and washer (AA).  
Tighten bolts (AA) with Allen wrench (FF).

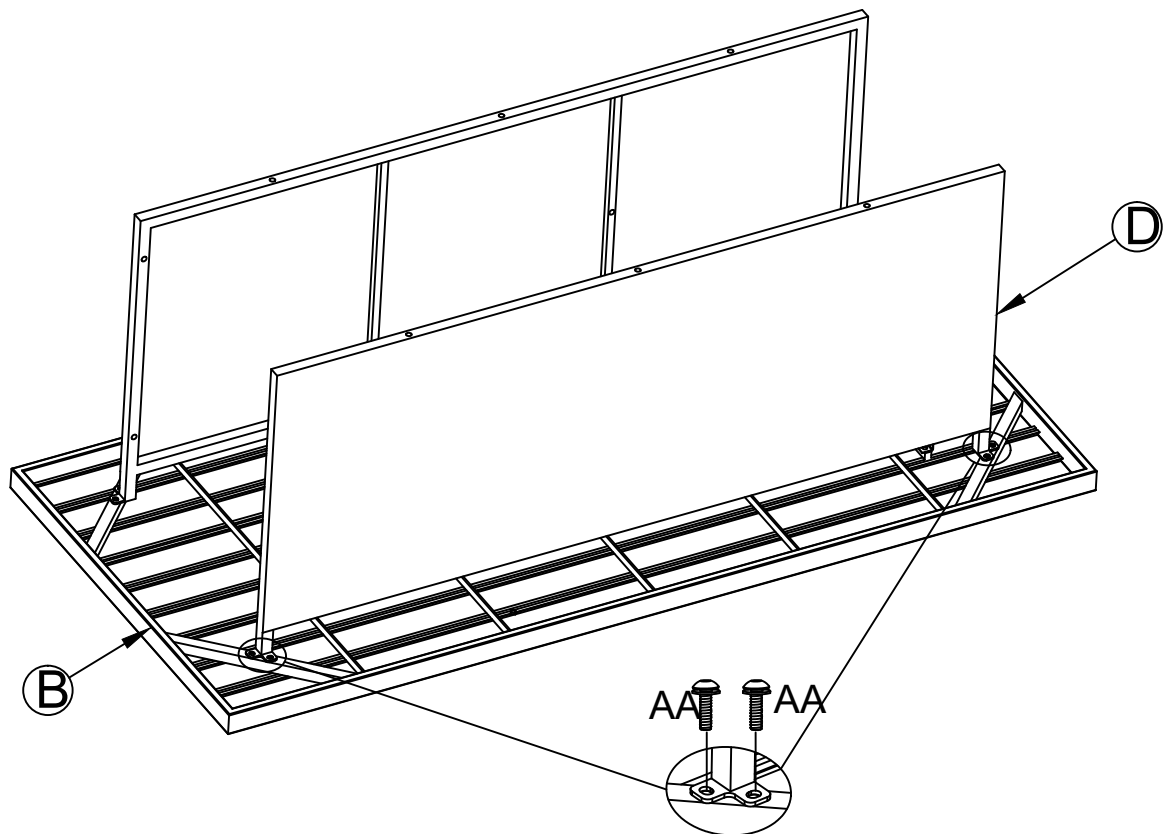

---

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905-4107, 8:30 a.m. – 5:00 p.m. PST /11:30 a.m.- 8:00 p.m., EST, Monday- Friday.


# Wal-Mart Assembly Instructions

## Fire Pit Assembly

Vendor stock No. BH19-092-097-26

### STEP 3

Attach the rear panel (E) to the panels (C & D) with M6x45 bolt and washers (BB).  
Tighten bolts (BB) with Allen wrench (FF).

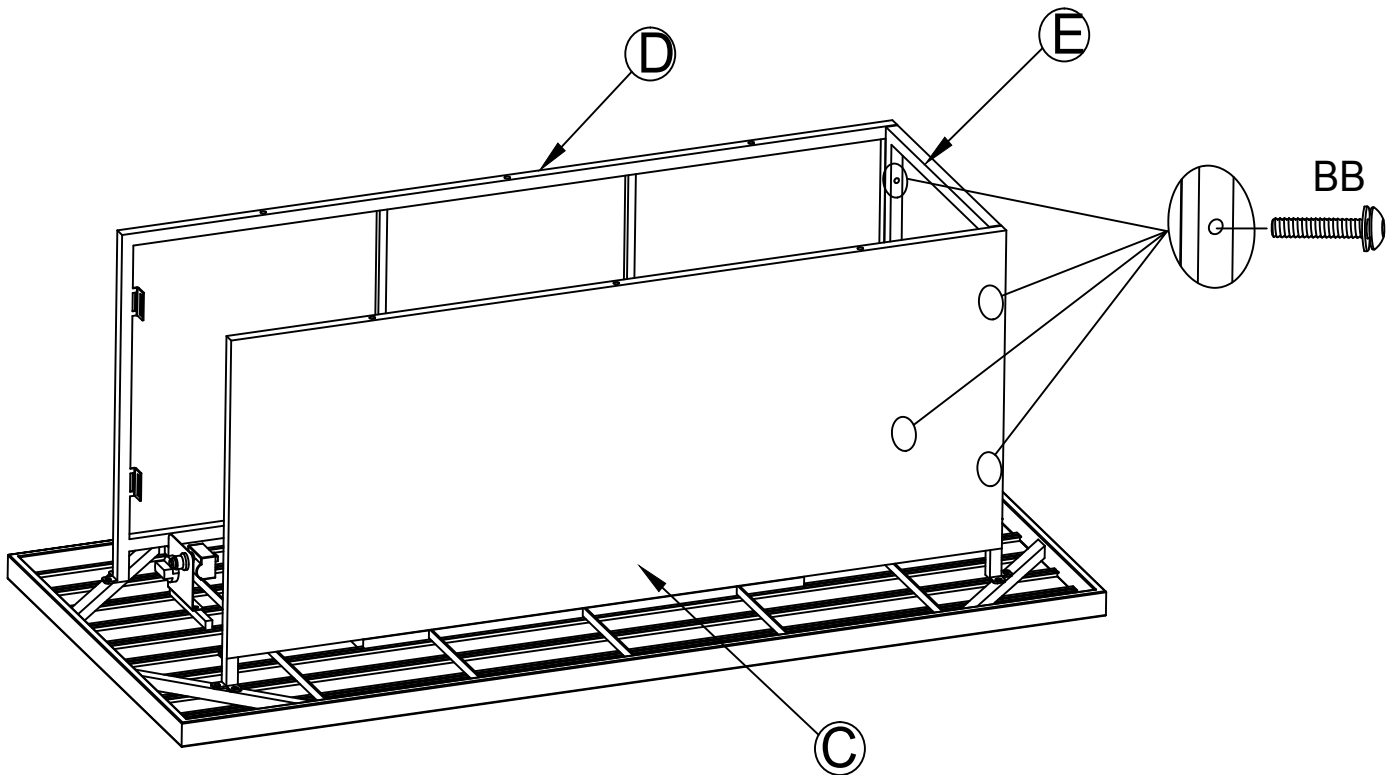

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905-4107, 8:30 a.m. – 5:00 p.m. PST /11:30 a.m.- 8:00 p.m., EST, Monday- Friday.


# Wal-Mart Assembly Instructions

## Fire Pit Assembly

Vendor stock No. BH19-092-097-26

### STEP 4

Insert the connector bar (G) between the panels (C & D).  
Attach with M6x15 bolt and washer (AA).  
Tighten bolts (AA) with Allen wrench (FF).

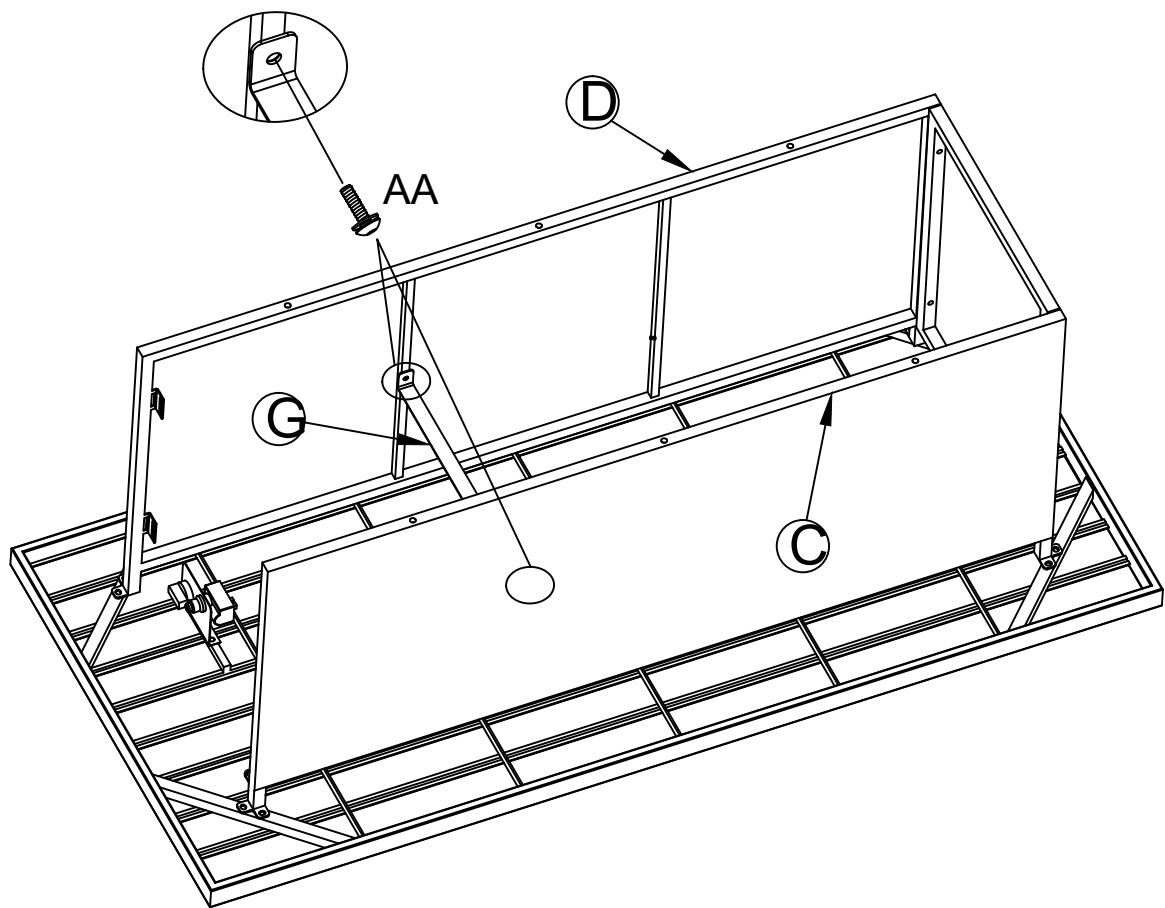


# Wal-Mart Assembly Instructions

## Fire Pit Assembly

Vendor stock No. BH19-092-097-26

### STEP 5

Attach the base (H) to the panels (C & D) with M6x55 bolt and washer (CC).  
Tighten bolts (CC) with the Allen wrench (FF).

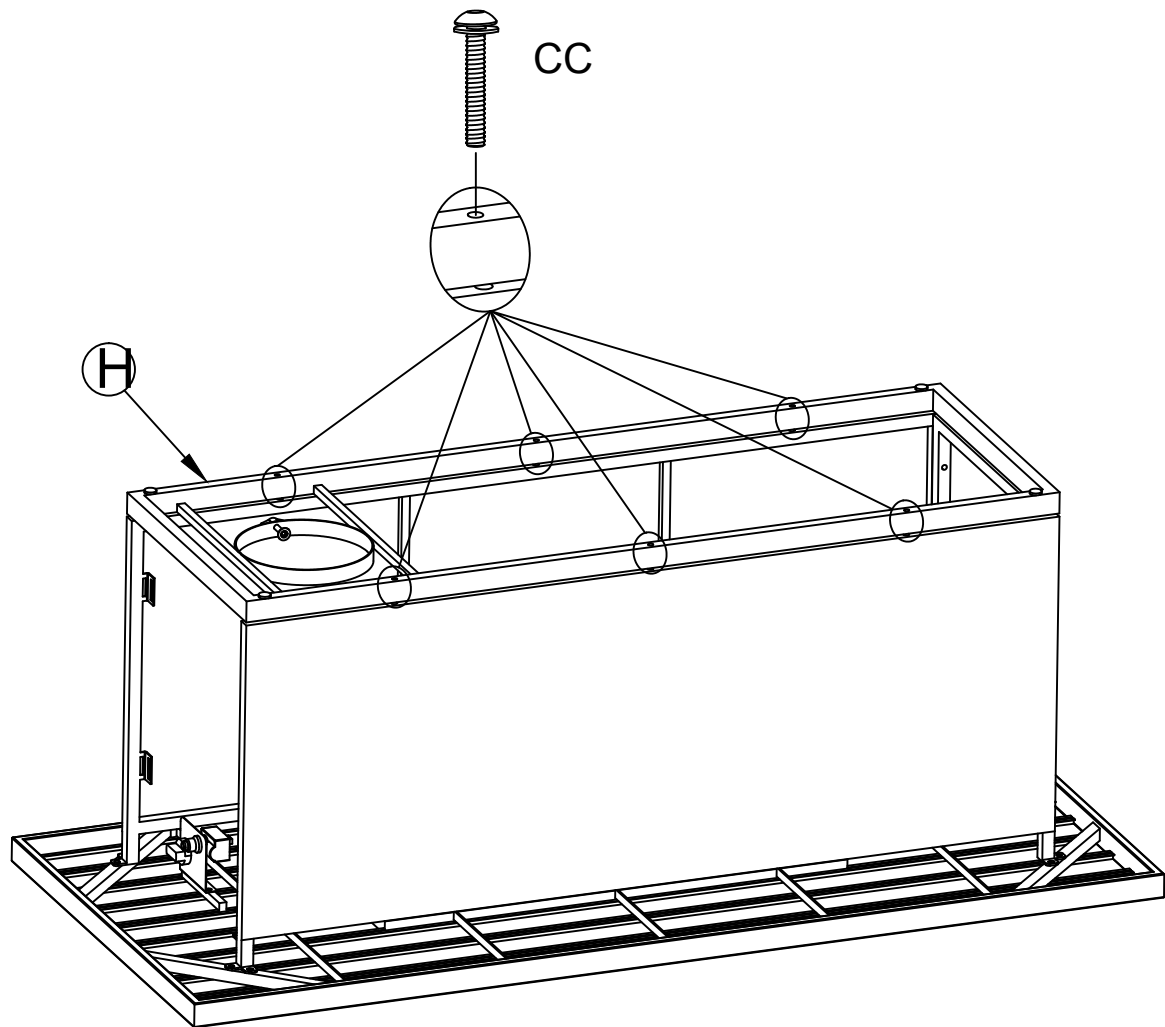

# Wal-Mart Assembly Instructions

## Fire Pit Assembly

Vendor stock No. BH19-092-097-26


### STEP 6

Ensure all bolts (AA, BB & CC) are securely tighten with the Allen wrench(FF).

Turn the fire table the correct way up.

Place the plastic washer (EE) over the hole as shown in the picture.

Insert the door (F) into the hole and secure with bolt (DD).

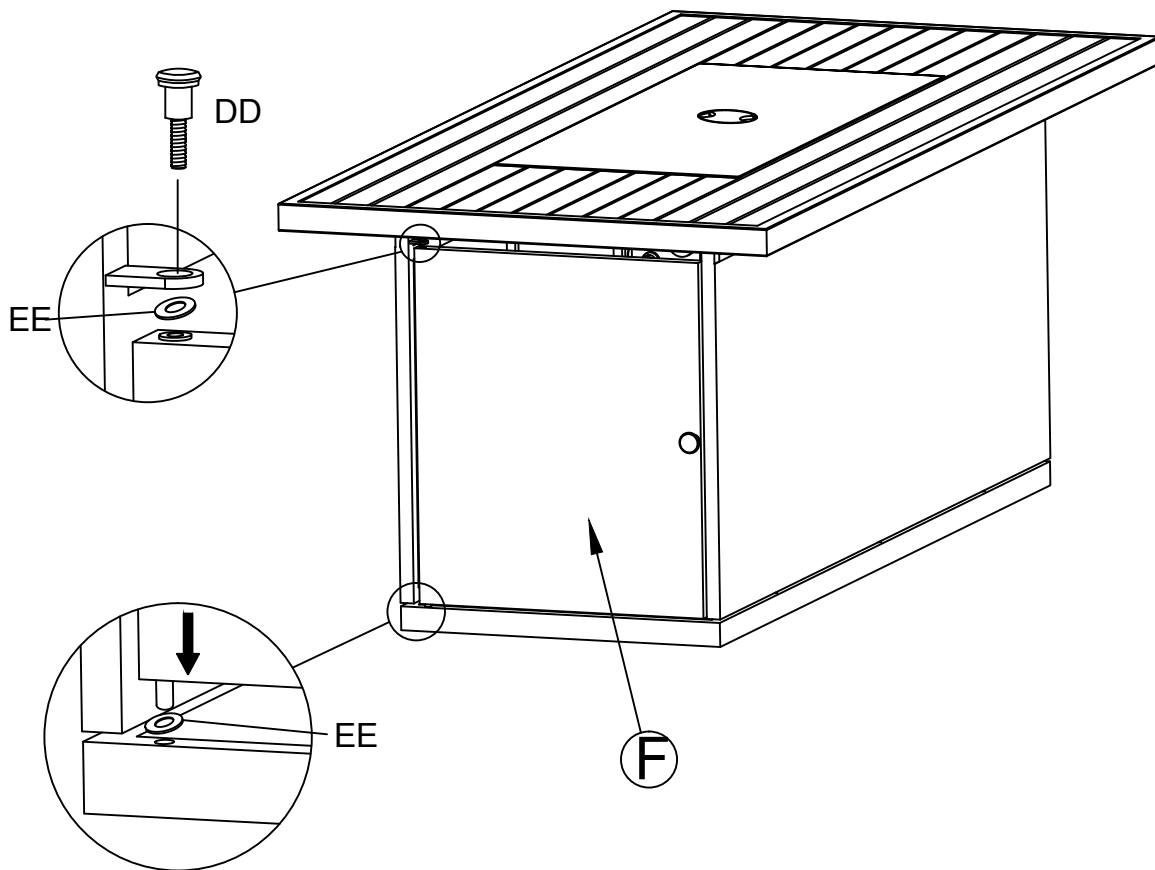

# Wal-Mart Assembly Instructions



## Fire Pit Assembly

Vendor stock No. BH19-092-097-26

### STEP 7

Place the glass media (I) into the burner bowl (K).

**Caution:** To ensure proper function, the screen on the burner should be free of glass media.

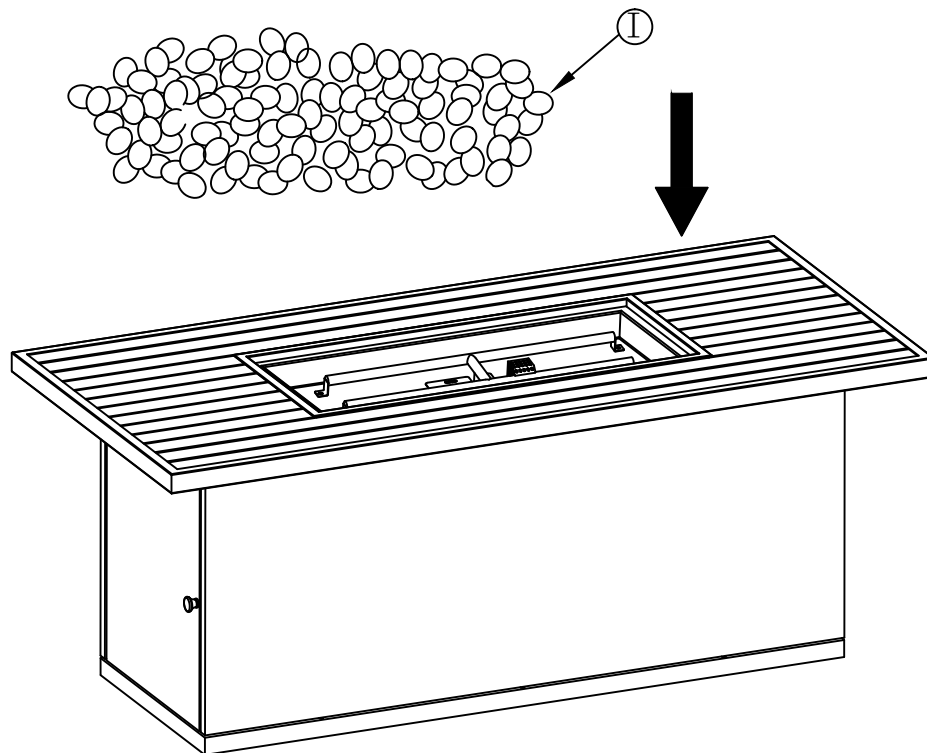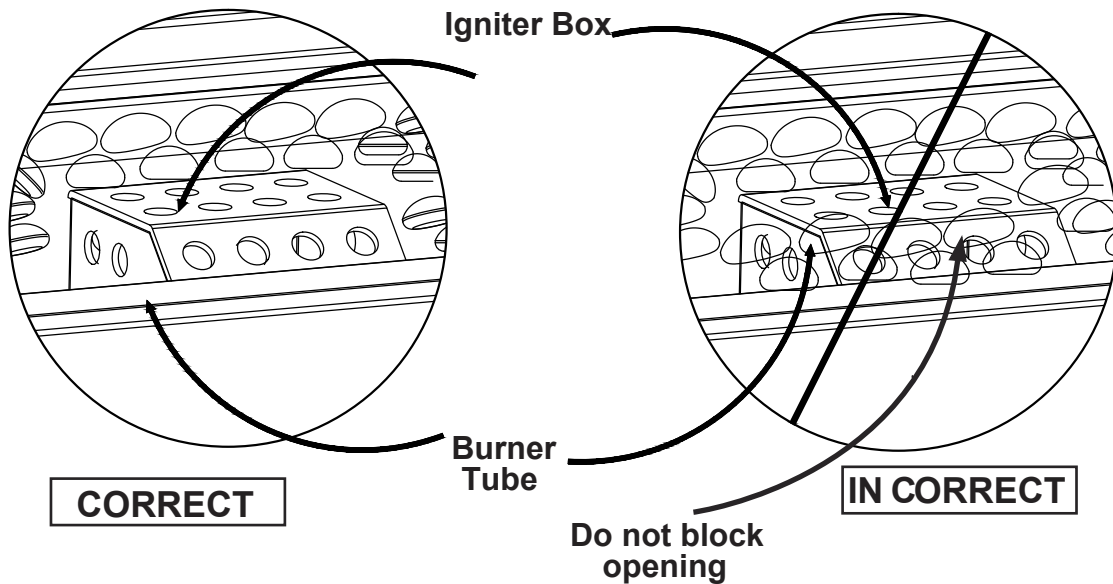

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905-4107, 8:30 a.m. – 5:00 p.m. PST /11:30 a.m.- 8:00 p.m., EST, Monday- Friday.


# Wal-Mart Assembly Instructions

## Fire Pit Assembly

Vendor stock No. BH19-092-097-26

### STEP 8

Place the lid (A) over the burner bowl (K).

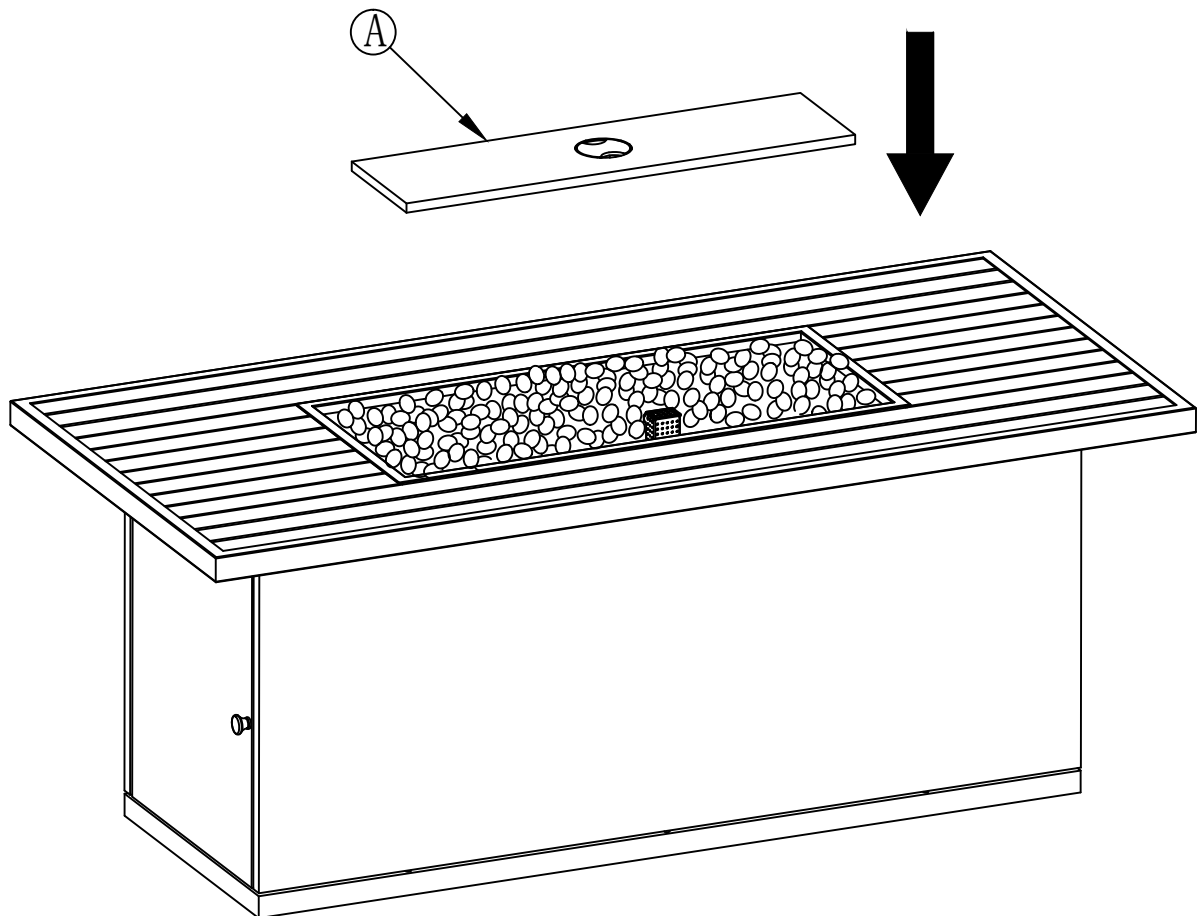


# Wal-Mart Assembly Instructions

## Fire Pit Assembly

Vendor stock No. BH19-092-097-26

### STEP 9

Your fire pit is ready to use.

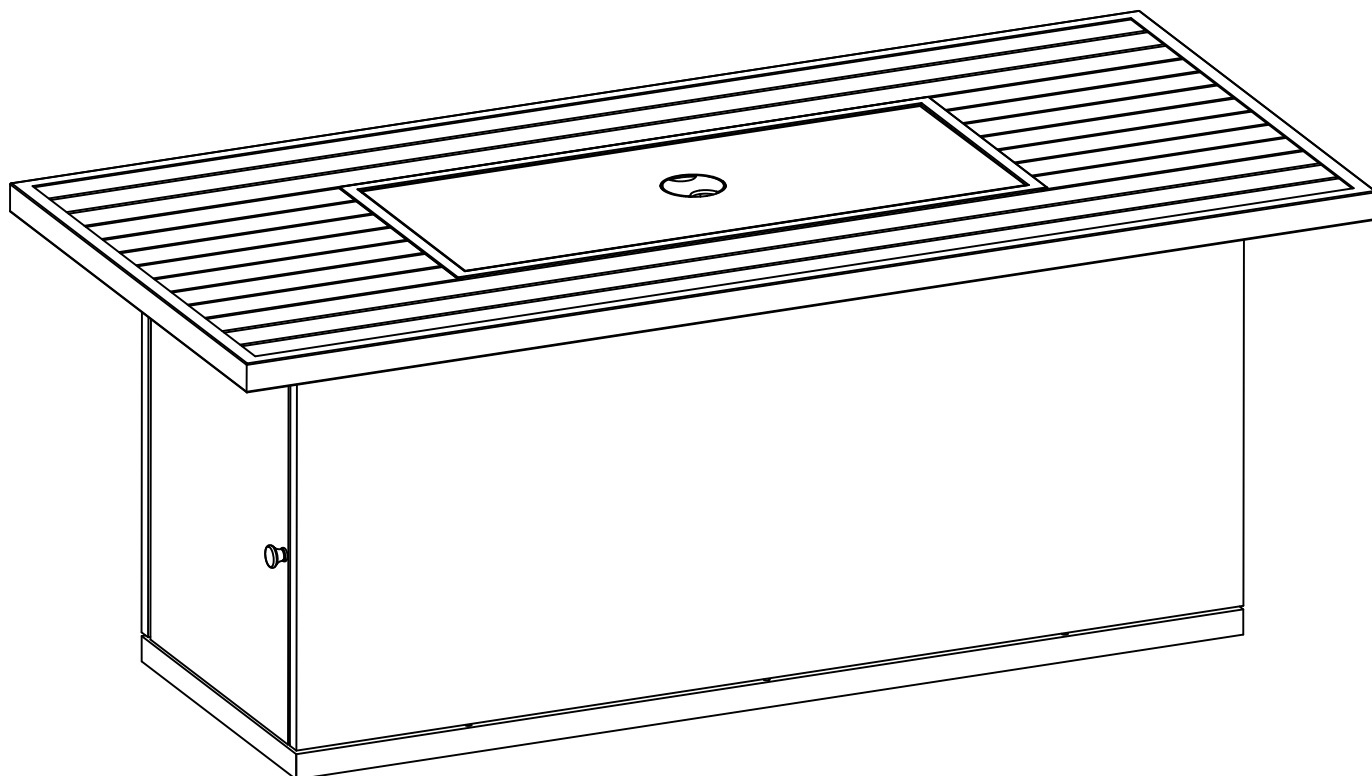



# Wal-Mart Assembly Instructions


## Fire Pit Installation

Vendor stock No. BH19-092-097-26

### Installing LP Gas Tank

To operate, you will need one precision-filled standard grill LP gas tank with external valve threads.

**⚠ CAUTION: LP gas tank must be properly disconnected and removed prior to moving this prior to moving this outdoor fireplace.**

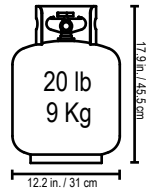


#### STEP 1

##### INSERTING LP GAS TANK

**Warning: Make sure LP gas tank valve is closed.**

1. Loosen LP gas tank retainer bolt by turning counter-clockwise.
2. Place precision-filled LP gas tank upright into hole in outdoor fireplace base so the tank valve is facing the gas line connection.
3. Secure tank by turning the LP gas tank retainer bolt clockwise until tight.

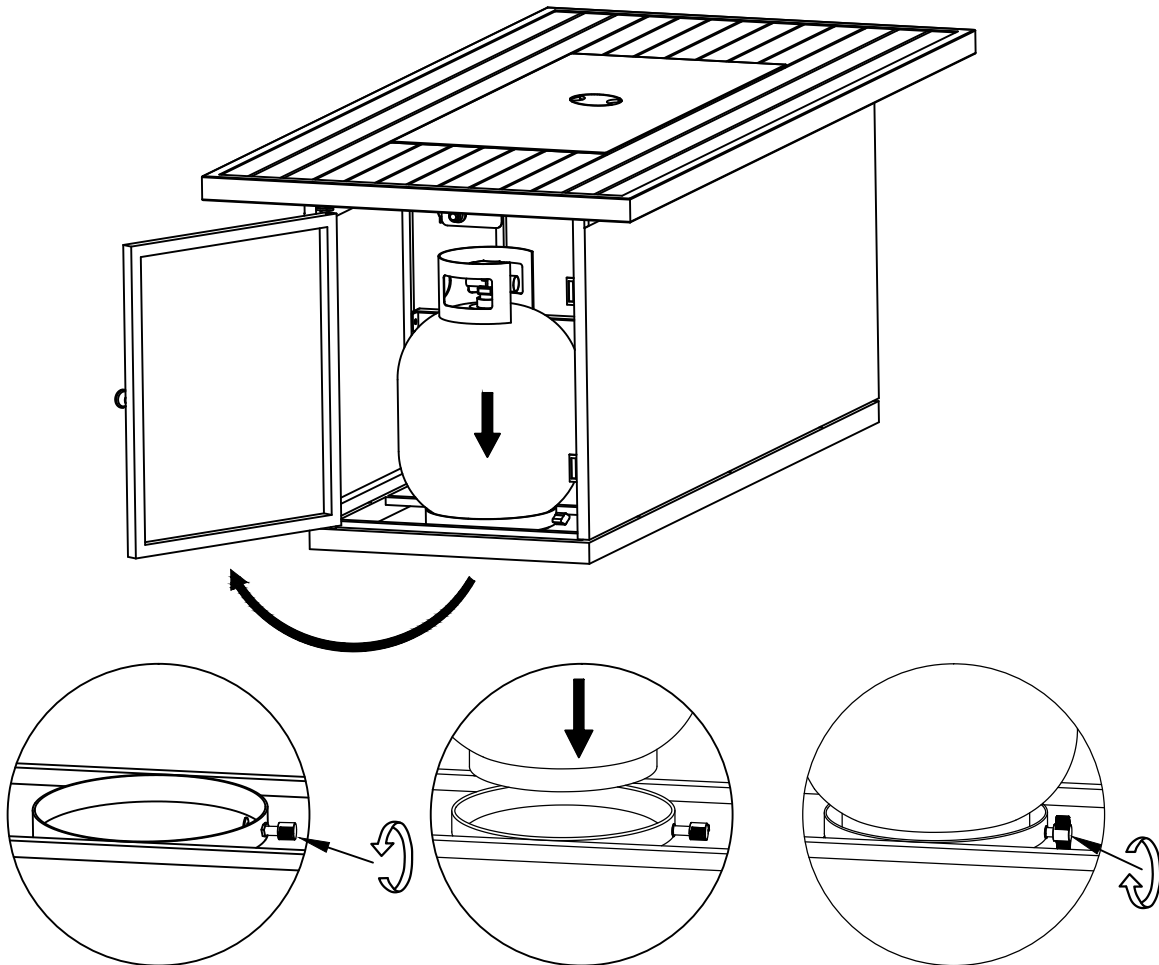

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905-4107, 8:30 a.m. – 5:00 p.m. PST /11:30 a.m.- 8:00 p.m., EST, Monday- Friday.

# Wal-Mart Assembly Instructions


## Fire Pit Installation

Vendor stock No. BH19-092-097-26

### STEP 2

#### CONNECTING LP GAS TANK

1. Before connecting be sure there is no debris caught in the head of the LP gas tank, head of the regulator valve or in the head of the burner or burner parts.
2. Connect the regulator/hose (P) to the gas tank by turning the knob clockwise until it stops.

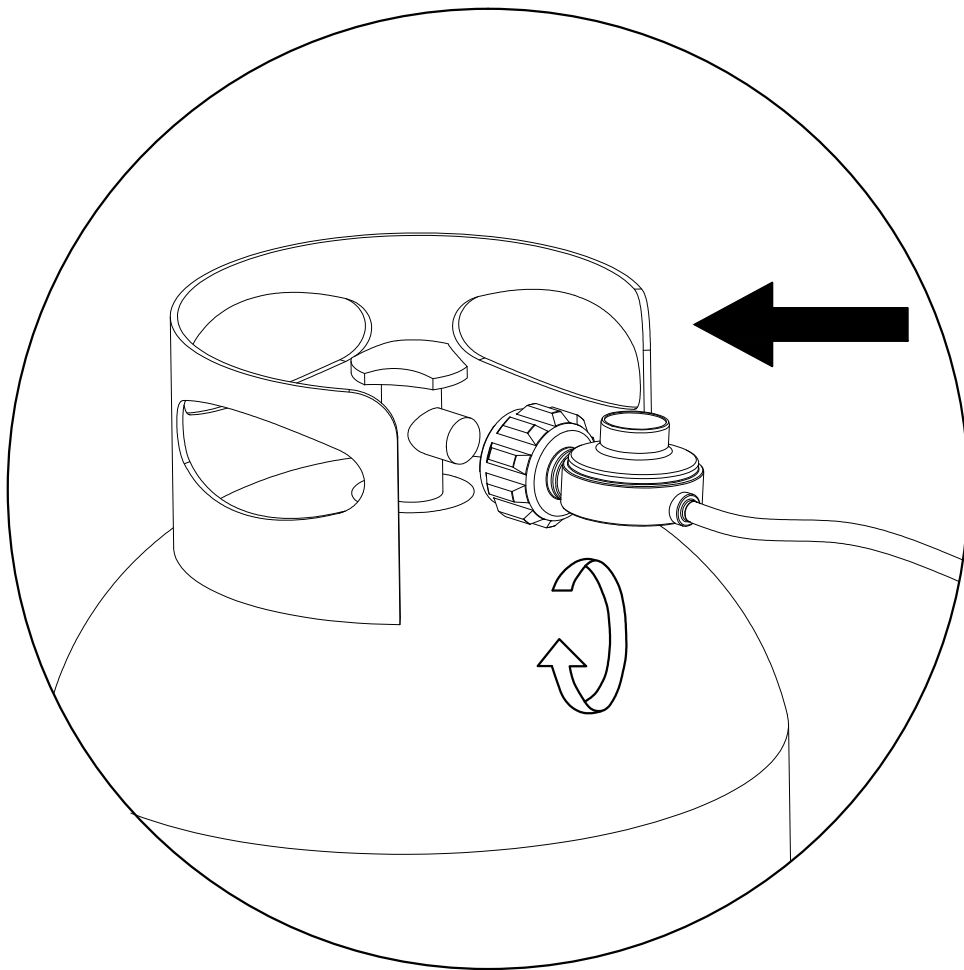

# Wal-Mart Assembly Instructions

## Fire Pit Installation


Vendor stock No. BH19-092-097-26

### STEP 3

#### DISCONNECTING LP GAS TANK

1. Before disconnecting make sure the LP gas tank valve is "CLOSED".
2. Disconnect regulator/hose assembly from LP gas tank turning the knob counter-clockwise until it is loose.
3. Place the protective cap cover on the LP tank and store the tank outdoors in a well-ventilated area out of direct sunlight.

**Caution: LP gas tank must be properly disconnected and removed prior to moving this fire table.**

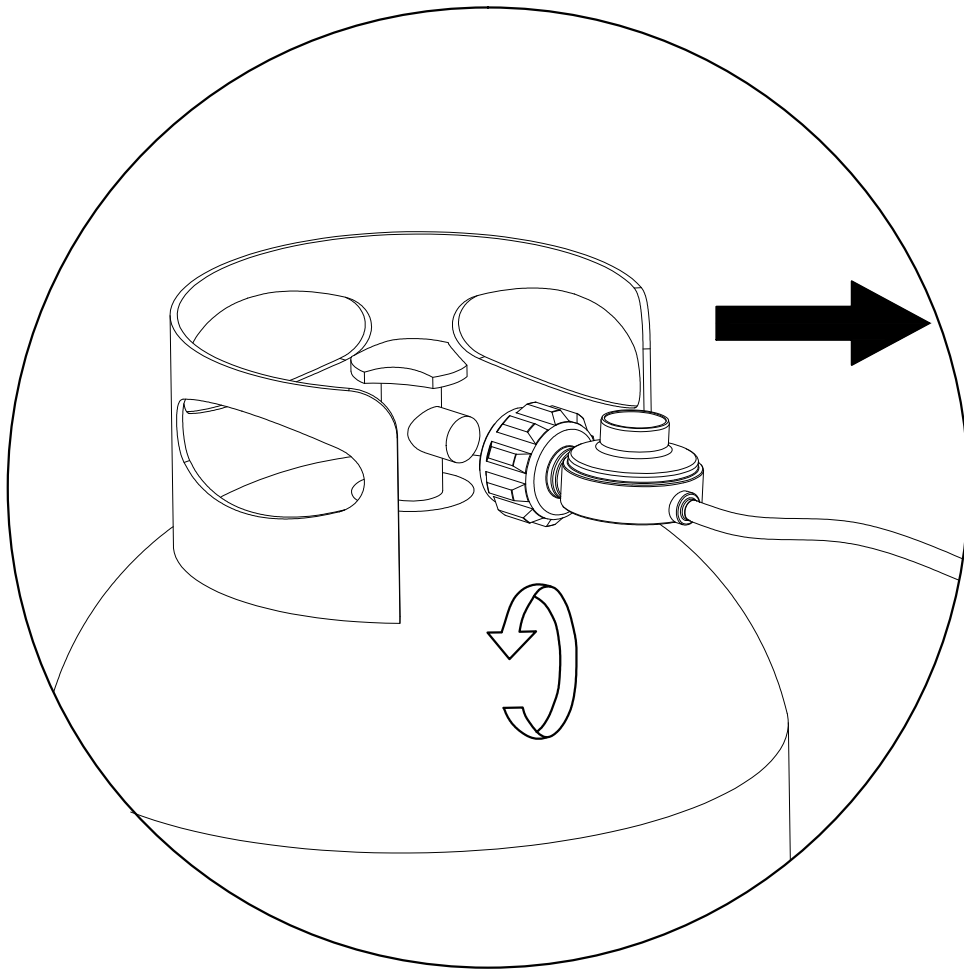

# Wal-Mart Assembly Instructions

## Fire Pit Installation

Vendor stock No. BH19-092-097-26

### Operating Instructions

#### CHECKING FOR LEAKS

- ⚠ Warning:** Before using this outdoor fireplace, make sure you have read, understand and are following all information provided in the “Important Safeguards” sections. Failure to follow those instructions can cause death, serious bodily injury or damage to property.

#### BURNER CONNECTIONS

1. Make sure the regulator hose and valve connections are securely fastened to the burner and the tank.
2. Visually check the connection between the burner/venturi tube and orifice.
3. Make sure the burner/venturi tube fits over the orifice.
4. Please refer to diagram for proper installation (figure 1 and 2).
5. If the burner/venturi tube does not rest flush to the orifice as shown (figure 1 and 2), please contact 1-866-905-4107 for assistance.

- ⚠ Warning:** Failure to inspect this connection or follow these instructions could cause a fire or an explosion which can cause death, serious bodily injury or damage to property.

#### TANK/GAS LINE CONNECTION OR LEAK TEST

1. Make 2-3 oz of leak detection solution by mixing one part liquid dishwashing soap with three parts water.
2. Make sure control knobs are in the “OFF” position (Figure 3).
3. Connect LP gas tank per “Installing LP Gas Tank” section.
4. Turn LP gas tank valve to “OPEN”.
5. Spoon several drops of solution, or use a squirt bottle, at all “X” locations (Figure 1 and 2).
  - a. If any bubbles appear, turn LP gas tank valve to “CLOSED”, reconnect and re-test.
  - b. If you continue to see bubbles after several attempts, turn LP gas tank valve to “CLOSED” and disconnect LP gas tank, per “Disconnecting LP Gas Tank”. Contact 1-866-905-4107 for assistance.
  - c. If no bubbles appear after one minute, turn LP gas tank valve to “CLOSED”, wipe away solution and proceed.

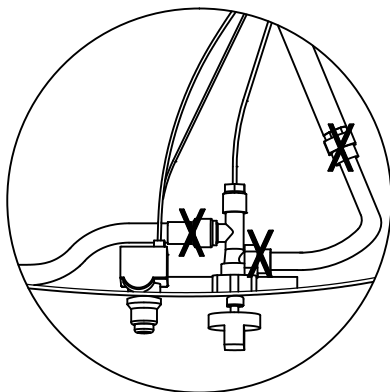


Figure 1

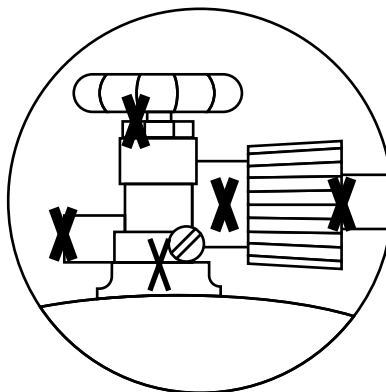


Figure 2

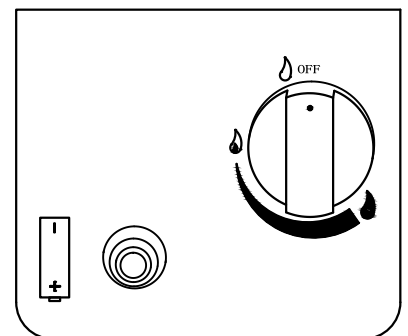


Figure 3

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at (866) 905-4107, 8:30 a.m. – 5:00 p.m. PST /11:30 a.m.- 8:00 p.m., EST, Monday- Friday.

# Wal-Mart Assembly Instructions


## Fire Pit Installation

Vendor stock No. BH19-092-097-26

### STEP 4

Insert the included battery (J) and switch knob (N) into the flame ignitor (O) and twist the button cover on. Do not over-tighten.

**Warning: Battery may contain mercury. Do not put batteries into the fire or trash. Please treat batteries as hazardous waste and recycle properly.**

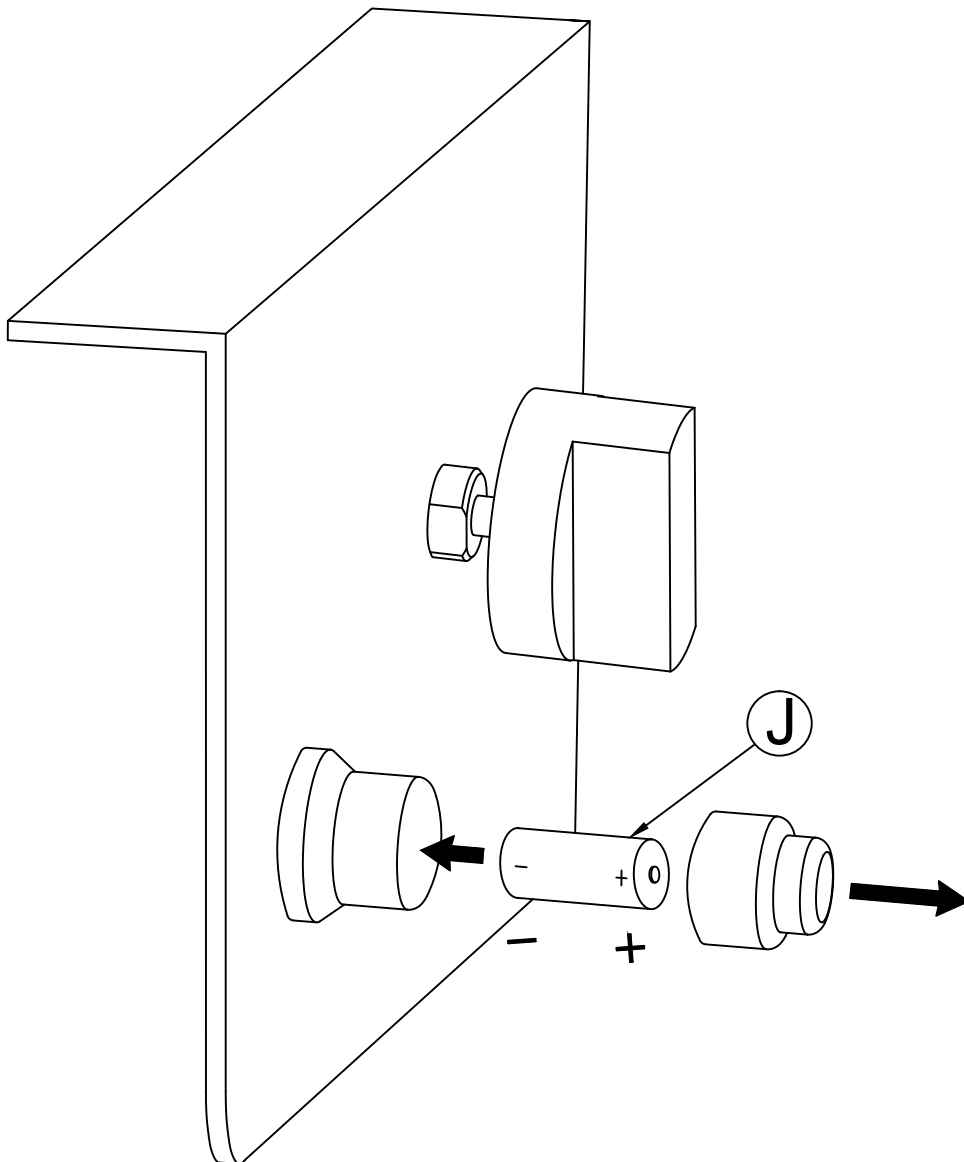


# Wal-Mart Assembly Instructions

## Fire Pit Installation

Vendor stock No. BH19-092-097-26

### STEP 5

Once the LP gas tank is installed, close the door.

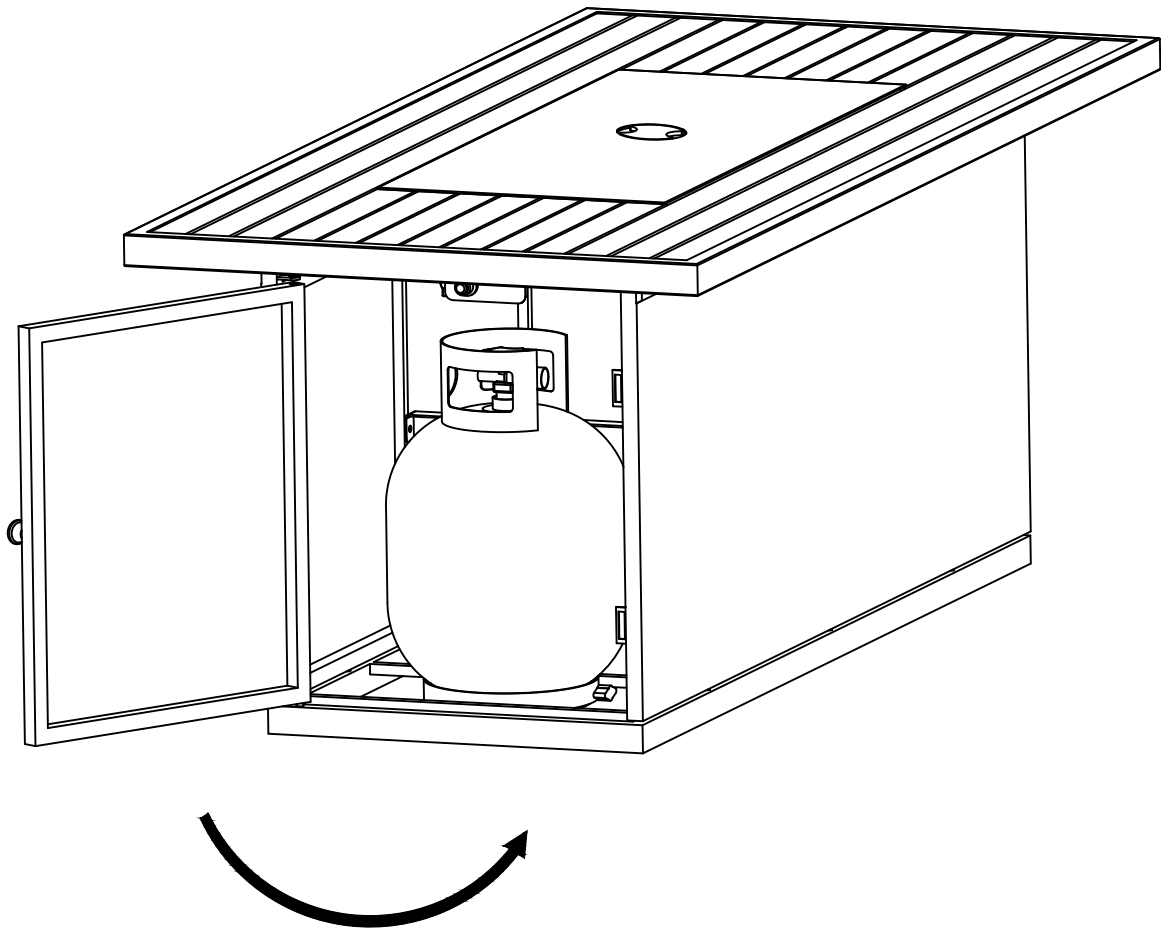


# Wal-Mart Assembly Instructions

## Fire Pit Installation

Vendor stock No. BH19-092-097-26

### STEP 6

The fire pit is now complete and ready to use.

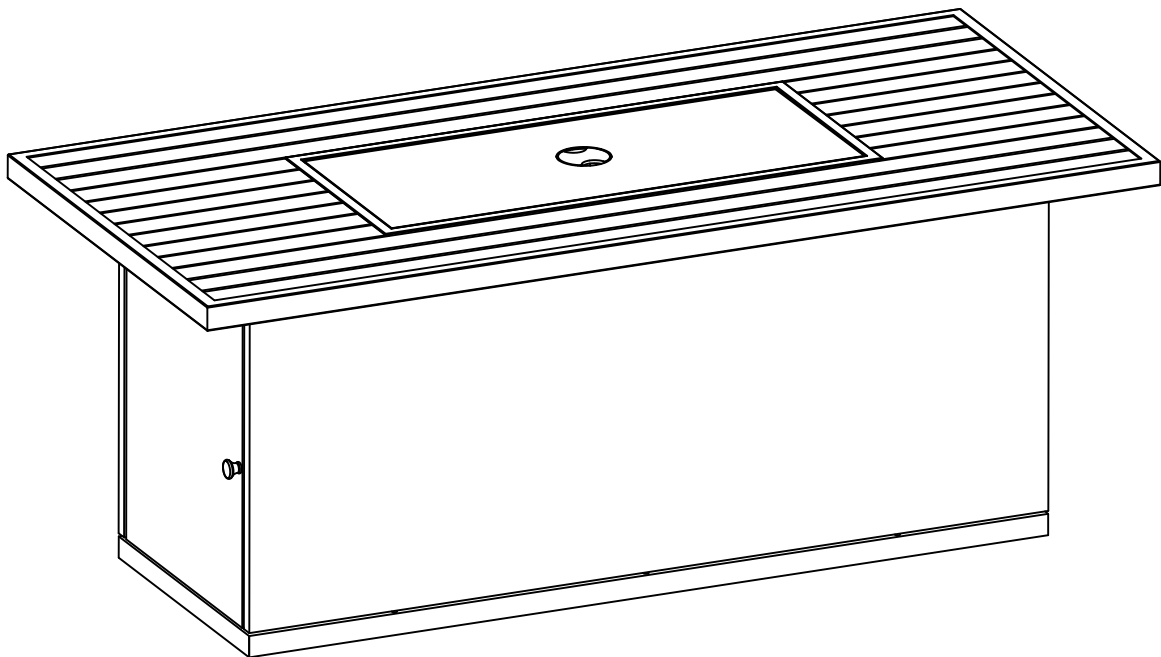

## Lighting

- ⚠ WARNING: NEVER** light the burner with the cover on the outdoor fireplace.
- ⚠ CAUTION: Keep outdoor gas appliance area clear and free from combustible materials, gasoline and other flammable vapors and liquids.**
- ⚠ CAUTION: Do NOT obstruct the flow of combustion and ventilation air.**

Figure 5

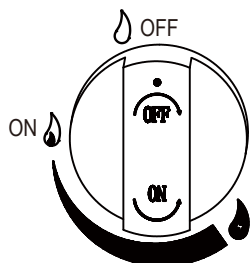
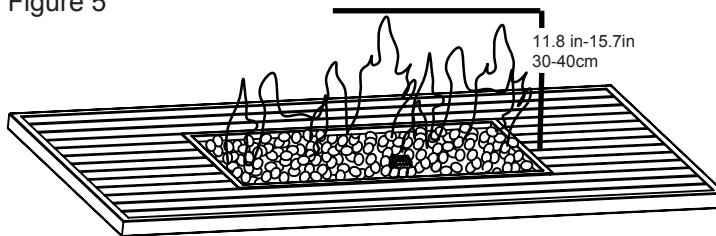


Figure 3

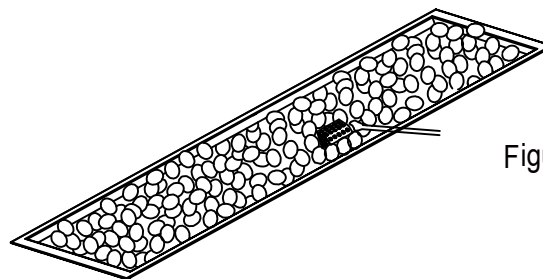





Figure 4

- ⚠ CAUTION: Check and clean burner/venturi tubes for insects and insect nests. A clogged tube can lead to a fire.**


1. Make sure all labels, packaging and protective films have been removed from the outdoor fireplace.
2. Check for obstructions of airflow to the burner. Spiders, insects and webs can clog the burner/venturi tube. A clogged burner tube can lead to a fire.
3. Control knob must be in the “ OFF” position (Figure 3).
4. Clear small area of glass rocks away from the igniter cover (Figure 4).
5. Connect LP gas tank per “Installing LP Gas Tank” section.
6. Turn LP gas tank valve to “OPEN”.
7. Push and hold the electronic igniter to create sparks within the electrode, continue to hold.
8. Push in the control knob and turn to the “ON” position, Keep holding down the control knob to allow gas to flow for 20 seconds.
9. After 20 seconds, release and turn control knob counterclockwise to adjust flame to desired height.
10. If ignition does not occur in 20 seconds turn burner control knob to “ OFF” wait 5 minutes, fan with a newspaper or magazine, and repeat lighting procedure.
11. Remove cover and lid from outdoor fireplace before lighting.
12. If igniter does not light burner:
  - a. Wearing heat-resistant gloves, position a long lit match or long lit butane lighter near the pilot housing.
  - b. Push and turn control knob to “ ON”
  - c. Remove match/lighter once burner is lit.

- ⚠ CAUTION: After lighting - using a fireplace tool and heat-resistant gloves, carefully move the glass beads back to their proper position, being careful to avoid the flame.**

13. After lighting, observe the burner flame make sure all burner ports are lit and flame height matches illustration (Figure 5)

- ⚠ CAUTION: If ignition does not occur in 5 seconds, turn control knob to “ OFF”, wait 5 minutes, fan with a newspaper or magazine and repeat lighting procedure.**

## Turning Off

1. Turn LP gas tank valve to “CLOSED”.
2. Turn control knob to the “ OFF” position. Note: A “poof” sound is normal as the last of the LP gas is burned.
3. Disconnect LP gas tank per “Disconnecting LP Gas Tank” section.



## Cleaning and Care

### **⚠ CAUTION:**

1. All cleaning and maintenance should be done when outdoor fireplace is cool and with the fuel supply disconnected.
  2. Do not clean any outdoor fireplace part in a self-cleaning oven, the extreme heat will damage the finish.
  3. Do not enlarge valve orifices or burner ports when cleaning the valves or burners.
- 

### **Notices**

1. This outdoor fireplace should be thoroughly cleaned and inspected on a regular basis.
  2. Abrasive cleaners will damage this product.
  3. NEVER use oven cleaner to clean any part of this outdoor fireplace.
- 

### **Before Each Use:**

1. Keep the outdoor fireplace area clear and free from any combustible materials, gasoline and other flammable vapors and liquids.
  2. Do not obstruct the flow of the combustion of LP gas and the ventilation of air.
  3. Keep the ventilation opening(s) of the LP gas tank area free and clear from debris.
  4. Visually check the burner flames to make sure your outdoor fireplace is working properly (Figure 5).
  5. See below for proper cleaning instructions.
  6. Check all gas connections for leaks.
  7. Check components for any signs of damage or rust.
  8. Check for obstructions of airflow to the burner. Spiders, insects and webs can clog the burner/venturi tube. A clogged burner/venturi tube can lead to a fire.
  9. If damage to any component is detected, do NOT operate until repairs are completed.
- 

### **Cleaning Surfaces**

1. Wipe surfaces clean with mild dishwashing detergent or baking soda mixed with water.
  2. For stubborn stains, use a citrus-based cleaner and a nylon scrubbing brush.
  3. Rinse clean with water.
  4. Allow to air dry.
- 

### **Before Storing**

1. Turn LP gas tank valve to "CLOSED".
2. Turn control knob to the "⚠ OFF" position. Note: A "poof" sound is normal as the last of the gas is burned.
3. Disconnect LP gas tank per "Disconnecting LP Gas Tank" section.
4. Clean all surfaces.
5. Lightly coat the burner with cooking oil to prevent excess rusting.

### **⚠ CAUTION: NEVER place cover on hot outdoor fireplace.**

6. If storing the outdoor fireplace indoors, cover the outdoor fireplace and store in a cool dry location away from children and pets.
7. If storing the outdoor fireplace outdoors, cover the outdoor fireplace with the included cover for protection from the weather.

## Care and Maintenance

Cleaning your fire table top on a consistent and regular basis will help aid in a longer lasting top.

Cover your fire table with the included cover when not in use to protect it from the elements.

We recommend that your fire table be stored indoors during the winter months.

If it must be stored outside, it should ALWAYS be covered.

---

## Product Registration

For faster warranty service, please register your product immediately. To register call (866) 905-4107.

## Replacement Parts

For replacement parts, call (866) 905-4107.

## ONE-YEAR LIMITED WARRANTY

The appliance has been manufactured under the highest standards of quality and workmanship. We warrant to the original consumer/purchaser that all aspects of this product will be free of defects in material and workmanship for one (1) year from the date of purchase. If within the stated warranty period a product is found to be defective in material or workmanship, the purchaser must contact the manufacturer's customer service department at 1- 866-905-4107. The manufacturer, at its option, will repair or replace the defective parts. Replacements for any defective part will be supplied free of charge for installation by the consumer. This warranty shall be effective from the date of purchase as shown in the purchaser's receipt. This warranty is valid for the original consumer purchaser only and excludes industrial, commercial or business use of the product, product damage due to shipment or failure which results from alteration, product abuse or product misuse, where performed by a container, service company or consumer. We will not be responsible for labor charges and/or damage incurred in installation, repair or replacement, nor for incidental or consequential damage.

This warranty does not apply: (a) to consumable parts, such as batteries or protective coatings that are designed to diminish over time, unless failure has occurred due to a defect in materials or workmanship; (b) to cosmetic damage, including but not limited to scratches, dents and broken materials unless failure has occurred due to a defect in materials or workmanship; (c) to damage caused by use with a third party component or product that does not meet the manufacturer's product specifications; (d) to damage caused by accident, abuse, or misuse; (e) to damage caused by operating the product contrary to the published user manual(s); or (f) to a product that has been modified to alter functionality or capability.

# Troubleshooting

Problem	Possible Cause	Prevention/Cure
Burner will not light using igniter	LP gas tank valve is closed	Make sure regulator is securely attached to the LP gas tank per "Installing LP Gas Tank," then turn LP gas tank valve to "OPEN"
	LP gas tank is low or empty	Exchange, refill or replace LP gas tank
	LP gas leak	1. Turn LP gas tank valve to "CLOSED" 2. Wait 5 minutes for gas to clear 3. Follow "Checking for Leaks" section
	Battery needs to be changed	Replace the "AA" battery (follow assembly step for inserting battery)
	Electrode and burners are wet	Wipe dry with cloth
	Electrode cracked or broken - sparks at crack	Replacement part(s) may be needed - contact Customer Care at (866) 905-4107
	Wire loose or disconnected	Reconnect wire or replacement part(s) may be needed - contact Customer Care at (866) 905-4107
	Wire is shorting (sparking) between igniter and electrode	Replacement part(s) may be needed - contact Customer Care at (866) 905-4107
Burner will not light with match	Bad igniter	Replacement part(s) may be needed - contact Customer Care at (866) 905-4107
	No gas flow	Check if LP gas tank is empty a. If empty, exchange, refill or replace LP gas tank b. If LP gas tank is not empty, refer to "Sudden drop in gas flow or reduced flame height" (see below)
	LP gas tank is low or empty	Exchange, refill or replace LP gas tank
	LP gas leak	1. Turn LP gas tank valve to "CLOSED" 2. Wait 5 minutes for gas to clear 3. Follow "Checking for Leaks" section
	Coupling nut and regulator not fully connected	Turn the coupling nut about one-half to three-quarters additional turn until solid stop. Tighten by hand only - do NOT use tools
	Obstruction of gas flow	1. Clear burner/venturi tube 2. Check for bent or kinked hose
	Disengagement of burner to valve	Re-engage burner and valve
	Spider webs or insect nest in burner/venturi tube	Clean burner/venturi tube
Sudden drop in gas flow or reduced flame height	Burner ports clogged or blocked	Clean burner ports
	Out of gas	Exchange, refill or replace LP gas tank
Irregular flame pattern flame does not run the full length of burner	Overfilling prevention device may have been activated	1. Turn control knob to "OFF" 2. Wait 30 seconds and light outdoor fireplace per "Lighting" section 3. If flames are still too low, reset the overfilling prevention device: a. Turn control knob(s) to "OFF" b. Turn LP gas tank valve to "CLOSED" c. Disconnect regulator d. Turn control knobs to "ON" e. Wait one minute f. Turn control knobs to "OFF" g. Reconnect regulator and leak check connections, being careful not to fully open valve h. Light outdoor fireplace per "Lighting" section
	Burner ports are clogged or blocked	Clean burner ports
	Burner may have residual manufacturing oils	Burn outdoor fireplace for 15 minutes and re-inspect
Flame is yellow or orange	Spider webs or insect nest in burner/venturi tube	Clean burner/venturi tube
	Poor alignment of valve to burner/venturi tube	Ensure burner/venturi tube is properly engaged with valve
Flame goes out	High or gusting winds	Do not use outdoor fireplace in high winds
	Low on LP gas	Exchange, refill or replace LP gas tank
	Excess flow valve tripped	Refer to "Sudden drop in gas flow or reduced flame height"
Flashback (fire in venturi/burner tube(s))	Burner and/or burner/venturi tube is blocked	Clean burner and/or burner/venturi tube
Flame seems to lose heat when burning in cold weather - temperature below 50°F	Ice has built up on the outside of the LP gas tank because the vaporization process is too slow.	1. Turn off per "Turning Off" section 2. Replace with a spare LP gas tank 3. Reconnect LP gas tank per "Installing LP Gas Tank" section 4. Follow "Checking for Leaks" section 5. Light outdoor fireplace per "Lighting" section

For assistance call (866) 905-4107.